


MODEL 217, 222.0/1/9

Shown on model 222


- 1 Cover
- 1.2 Left partial cover
- 1.3 Rear partial cover
- 2 Bolts

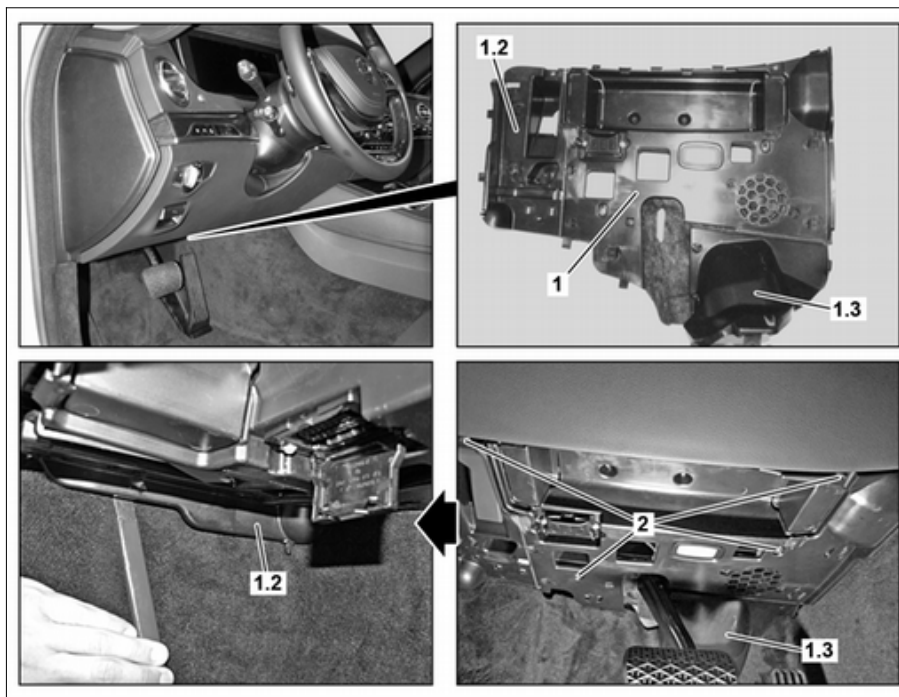



P68.20-4624-06

Shown on model 222

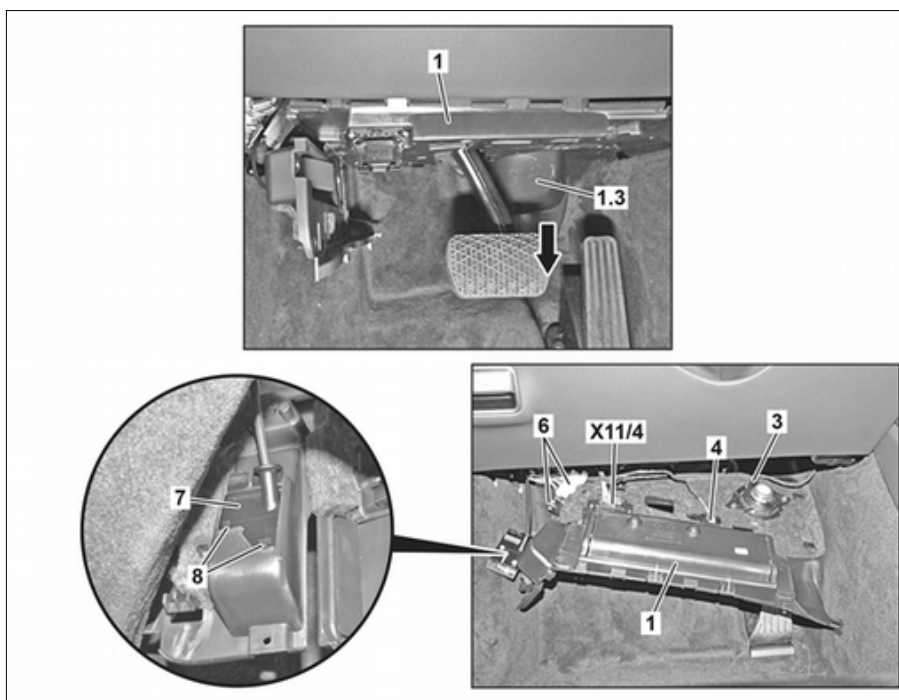- 1 Cover
- 1.3 Rear partial cover
- 3 Electrical connector
- 4 Electrical connector
- 6 CAN hub
- 7 Engine hood cable release handle
- 8 Engine hood release handle catch tab
- X11/4 Diagnostic connector



P68.20-4623-06

 	Remove/install		
1	Move driver seat to end position toward rear		
2	Switch off ignition and remove transmitter key		
3	Remove driver kneebag	MODEL 217 MODEL 222.0/1/9 with CODE 294 (Kneebag)	AR91.60-P-0200LF
4	Remove bolts (2)		
5	Fold left partial cover (1.2) down with suitable tool		
6	Pull left partial cover (1.3) down in direction of arrow		

7	Push cover (1) in direction of travel and lower	i Lower cover (1) downward only until engine hood cable release handle (7), electrical connectors (3, 4), CAN hub (6) and data link connector (X11/4) are accessible.	
8	Unlock diagnostic connector (X11/4) and remove from cover (1)		
9	Detach electrical connections (3, 4)		
10	Unclip CAN distributor (6)		
11	Detach engine hood cable release handle catch tab (8) and guide engine hood cable release handle (7) toward inside through cover (1)		
12	Remove cover (1) from footwell		
13	Transfer speaker and footwell lamp	When replacing cover (1)	
14	Install in the reverse order		