


Model 217


Shown on left side of vehicle

- 1 Transitions
- 2 Collar nut
- 3 Expansion rivet
- 4 Collar nuts
- 5 Screw clips

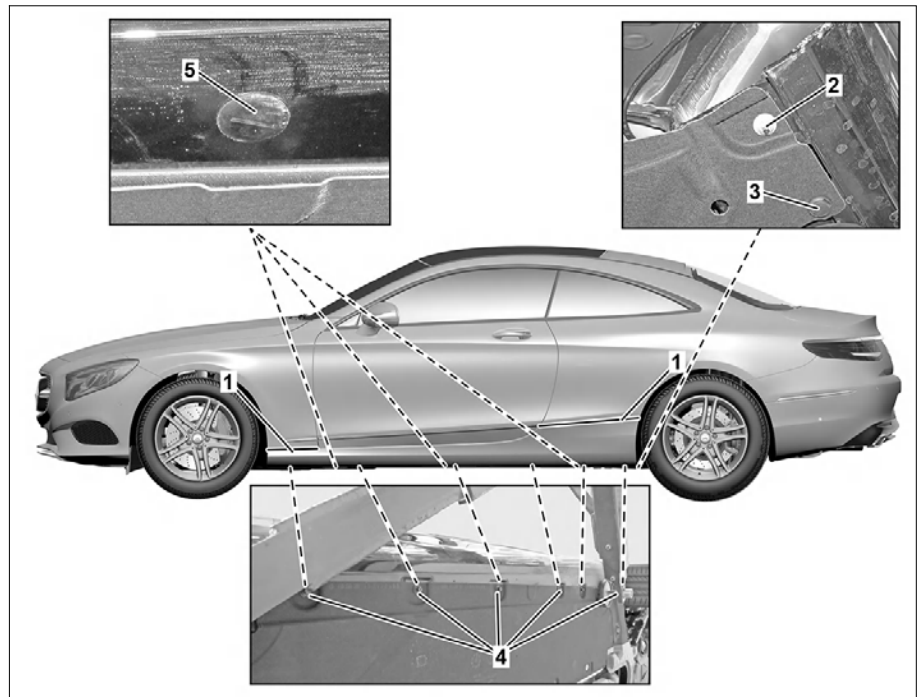


P88.80-2250-06

- 6 Expansion clip for mount
- 7 Retaining clips
- 8 Assembly wedge

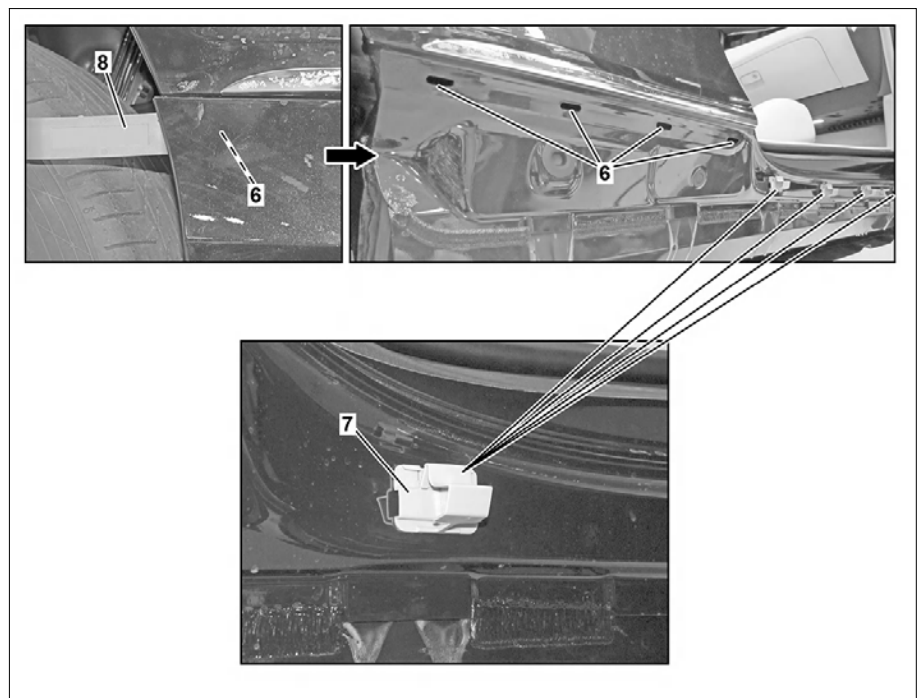







P88.80-2251-06

- 9 Expansion rivet
- 10 Bolts
- 11 Engine compartment paneling
- 12 Underfloor paneling

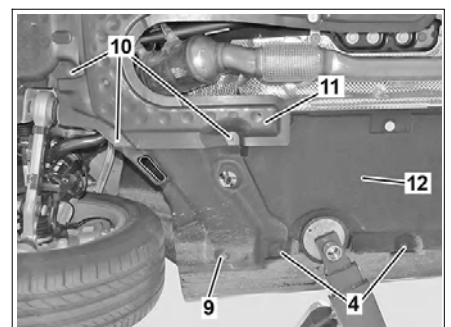

P88.80-2252-01

	Risk of death caused by vehicle slipping or toppling off of the lifting platform.	Align vehicle between vehicle lift columns and position the four support plates at the vehicle lift support points specified by the vehicle manufacturer.	AS00.00-Z-0010-01A
	Remove/install		
1	Mask body at transitions (1) with solid adhesive tape	 Removal: Mask side wall and fender end top at transition to longitudinal member paneling with solid adhesive tape. Otherwise the paint on the longitudinal member paneling can be damaged during removal.	
2	Lift vehicle with vehicle lift		
3	Remove complete wheel		AR40.10-P-1102A
4	Detach front section of fender liner up to cutout of suspension strut and fold over toward rear in direction of suspension strut		AR88.10-P-1400LC
5	Remove collar nut (2) and expansion rivet (3) on underfloor paneling (12)		
6	Unscrew bolts (10) from engine compartment paneling (11)		
7	Remove expansion rivet (9) from underfloor paneling (12)		
8	Pull engine compartment paneling (11) downward until longitudinal member paneling is accessible		
9	Remove collar nuts (4) on underfloor paneling (12) along longitudinal member paneling		
10	Turn screw clips (5) 90° and remove		
11	Unclip longitudinal member paneling from the four expansion clips mounts (6) at rear end with assembly wedge (8)	 Mounting wedge	*110589035900
12	Lift longitudinal member paneling starting at rear over lugs on retaining clips (7), unclip at front and lift longitudinal member paneling.,	 Door must be opened during removal and installation.  Helper required.	
13	Install in the reverse order		

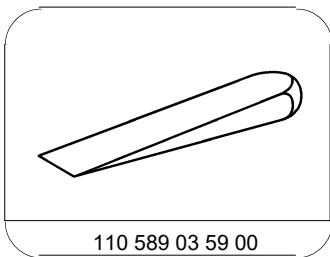

110 589 03 59 00

Mounting wedge