


Model 217  
with code 811 (High-End sound system)

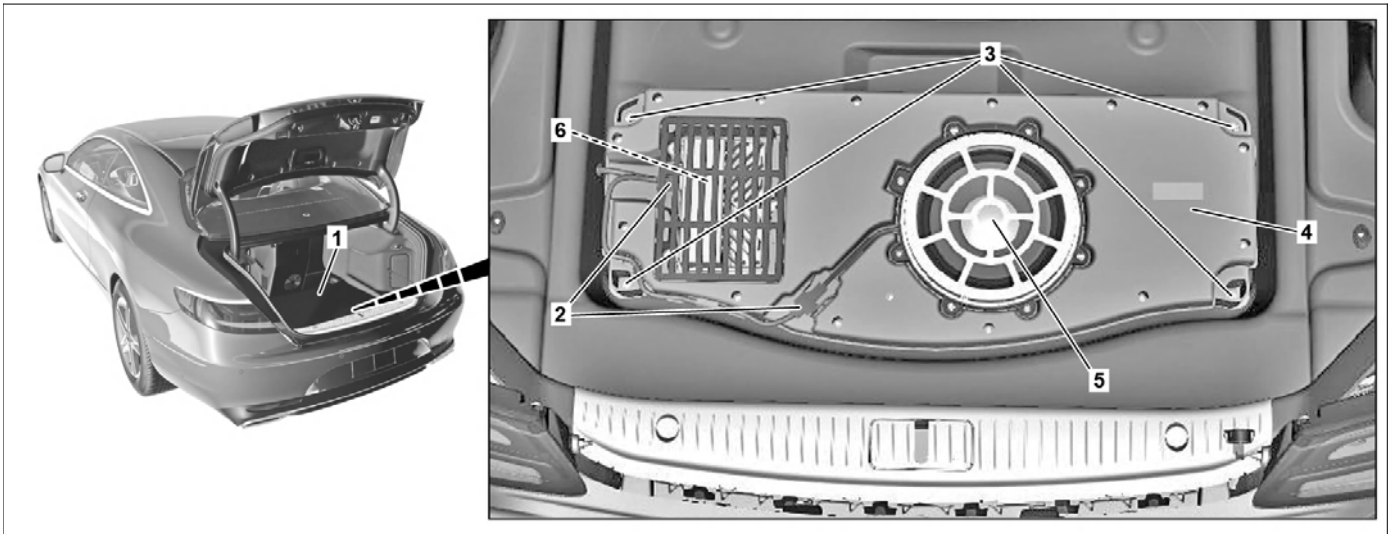

P82.62-4163-08

1 Trunk floor lining  
2 Electrical connectors  
3 Bolts

4 Subwoofer  
5 Woofer  
6 Woofer amplifier

	<b>Warning</b>	<b>Risk of injury</b> caused by fingers being jammed or pinched when removing, installing or aligning hoods, doors, trunk lid/rear-end door or sliding roof.	No parts of the body or limbs should be within the operating area when the components are moving.	AS00.00-Z-0011-01A
		Information on preventing damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
		Notes on HANDS-FREE ACCESS		AH80.61-P-0001-01A
		<b>Remove/install</b>		
1		Switch off ignition and remove transmitter key		
2		Open luggage compartment lid		
3		Lift trunk floor lining (1) upward and fix in place		
4		Separate electrical connectors (2)		
5		Remove bolt (3)		
6		Remove subwoofer (4)		
7		Remove woofer (5)	When replacing the subwoofer (4).	
8		Remove woofer amplifier (6)	When replacing the subwoofer (4).	AR82.62-P-7722LC
9		Install in the reverse order		
10		Perform function test		