


MODEL 217.3

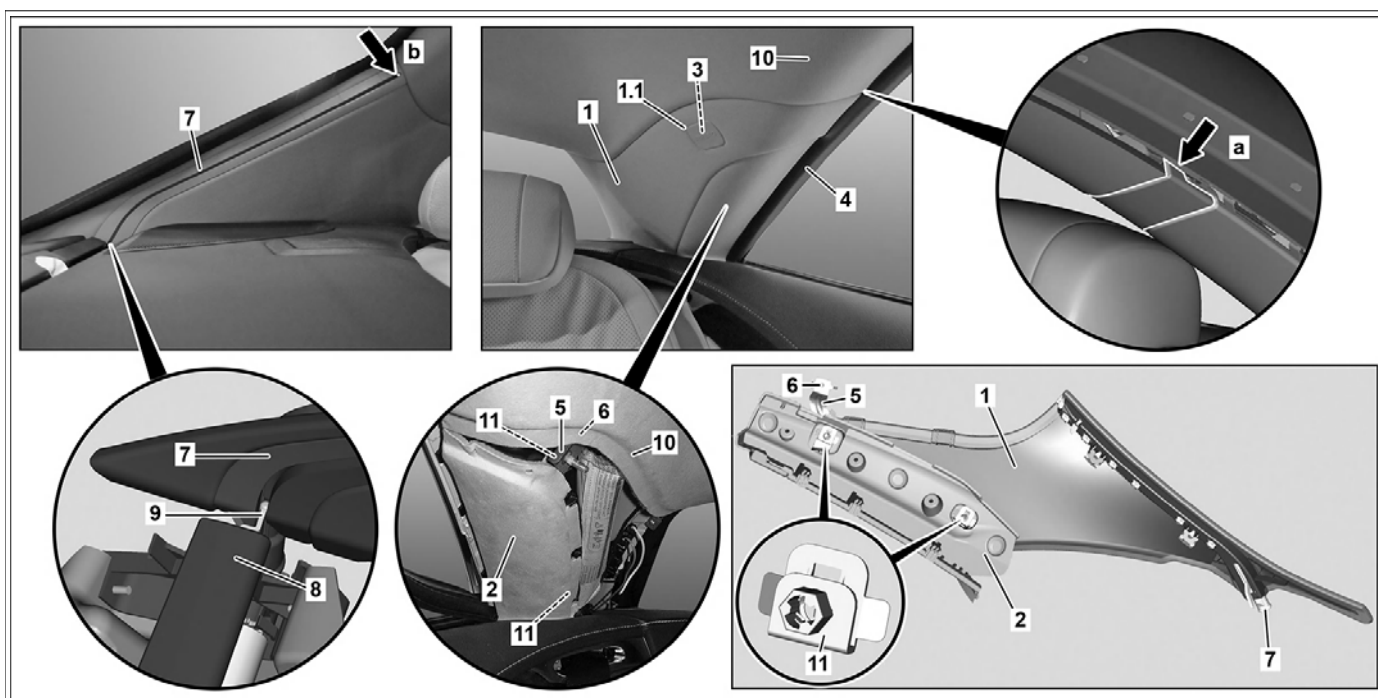


P68.30-3779-09

- |     |                                  |   |            |    |                  |
|-----|----------------------------------|---|------------|----|------------------|
| 1   | C-pillar paneling top section    | 4 | Edge guard | 8  | Roller sun blind |
| 1.1 | Cover                            | 5 | Bracket    | 9  | Pin              |
| 2   | C-pillar paneling bottom section | 6 | Screw      | 10 | Headliner        |
| 3   | Nut                              | 7 | Guide rail | 11 | Clamping buckles |

	Remove/install		
1	Remove edge guard (4) in area of C-pillar paneling (1, 2)		
2	Unclip cover (1.1)		
3	Unscrew nut (3)		
4	Unclip guide rail (7) from C-pillar paneling top section (1)	<p>  Install extraction hook in opening (arrow B), turn 90° and unclip guide rail (7) from top downward. Guide rail (7) is hooked into C-pillar paneling top section (1) at bottom.</p> <p> <b>Installation:</b> Ensure that pin (9) on roller blind (8) is seated correctly in guide rail (7). Ensure that guide rail (7) is seated correctly.</p> <p> Extraction hook</p>	*140589023300
5	Pry shackle (arrow A) on C-pillar paneling top section (1) over headliner (10)		
6	Unclip C-pillar paneling top section (1) from C-pillar paneling bottom section (2)		
7	Slightly pull headliner (10) down in area of bracket (5)	When removing C-pillar paneling bottom section (2)	
8	Remove screw/bolt (6) and remove bracket (5)	So that bolt (6) can reach bracket (5).	
9	Remove clamping buckles (11) together with C-pillar paneling bottom section (2)	When removing C-pillar paneling bottom section (2)	
		<b>Installation:</b> Replace clamping buckles (11) if required.	
	<b>Check</b>		
10	Check all retaining clips for damage	If necessary	↓

		Replace retaining clip.	
11	Install in the reverse order		

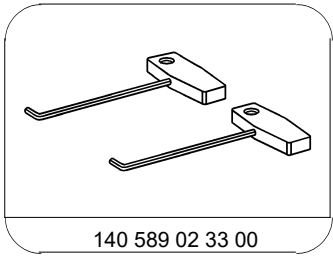

140 589 02 33 00

Extraction hook