


MODEL 221.0 /1 up to 31.5.09
except CODE (498) Japan version
with CODE (386) Preinstallation for telephone "Cell phone", UPCI [UHI] system
with CODE (388) Telephone "Cell phone", UPCI [UHI] system
with CODE (389) Mobile phone preinstallation with universal interface, USA/Canada

- 2 iPod coupling
- 3 Cradle
- 4 Glove compartment
- 7 iPod

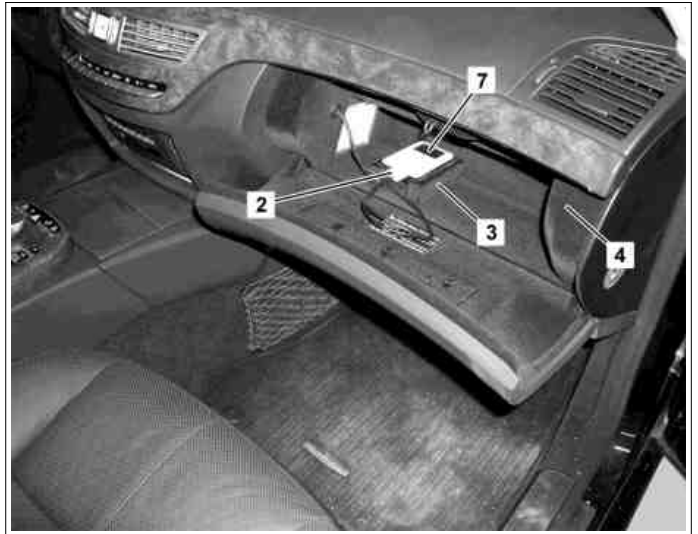

P82.60-5467-11

	Remove		
1	Disconnect battery ground line		AR54.10-P-0003SX
2	Remove COMAND controller unit		AR82.85-P-1100SX
	Install		
3	Retrofit iPod interface wiring harness		AZ82.60-P-0001-01SX
4	Retrofit iPod wiring harness		AZ82.60-P-0001-02SX
5	Retrofit iPod interface		AZ82.60-P-0001-03SX
6	Affix cradle (3) in glove box (4) with MB universal adhesive as per picture	MB universal glue	*BR00.45-Z-1003-02A
7	Install remaining parts onto vehicle		
8	Connect iPod (7) to iPod coupling (2) in glove box (4)		
9	Place iPod (7) in cradle (3)		
10	Connect STAR DIAGNOSIS		
11	Perform retrofit variant coding	Perform variant coding with Star Diagnosis to activate the AUX function of the COMAND.	
12	Close STAR DIAGNOSIS		
13	Carry out function check	Check iPod functions as per iPod operating instructions in vehicle.	

Repair materials

Number	Designation	Order number
BR00.45-Z-1003-02A	Adhesive/Dekalin 3649	A 000 989 82 71

Parts ordering notes

Part no.	Designation	Quantity
B6 782 42 24	iPod installation kit (ECE/ROW)	1
B6 782 42 23	iPod Installation kit (USA)	1
B6 782 42 07	Cradle (ECE, ROW, USA)	1