


P68.10-3471-09

- 1 Trim strip
- 2 Air nozzle
- 3 Bolt

- 4 Wiring harness
- 5 Electrical connectors
- 6 Center air outlet

- 7 Covering
- N72/1 Upper control panel control unit

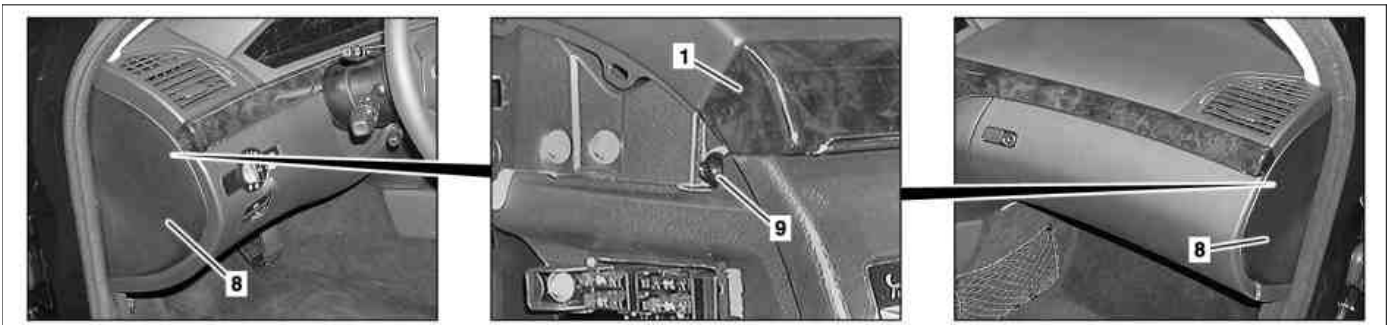

P68.10-3550-07

- 1 Trim strip

- 8 Cover


- 9 Bolt

Modification notes

13.12.05	Modified mount for trim strip	Steps 3, 4	
----------	-------------------------------	------------	--

	Remove/install		
	Information on preventing damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
1	Move steering column back and down		
2	Switch off ignition and withdraw transmitter key or Keyless Go start/stop button from the EIS [EZS] control unit	Keyless Go start/stop button only for vehicles with code (889) Keyless Go.	
3	Unclip covers (8) from instrument panel		*110589035900
4	Remove bolts (9)		
5	Unclip air nozzle (2) and unscrew bolt (3).		
6	Unclip trim strip (1) from outsides toward center from instrument panel	Installation: Correctly position cover (7) on left and right. 	*110589035900
7	Remove trim strip (1), tilt upward and expose electric wiring harness (4).		
8	Separate electrical connectors (5)		

9	Remove trim strip (1) from vehicle and lay down.	ⓘ Lay trim strip (1) down on suitable subsurface to prevent scratching the surface of the trim strip (1).	
10.1	Remove upper control panel control unit (N72/1) and then remove center air nozzle (6) from trim strip (1).	When replacing trim strip (1). ⓘ See: ↓ Remove and install center air nozzle	AR83.10-P-4503SX
11	Install in the reverse order		

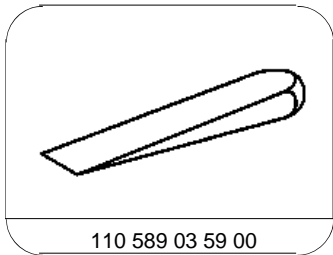

110 589 03 59 00

Mounting wedge