


MODEL 221.0 /1 as of 1.6.09

MODEL 221.0 /1 with CODE (800) Model year 2010

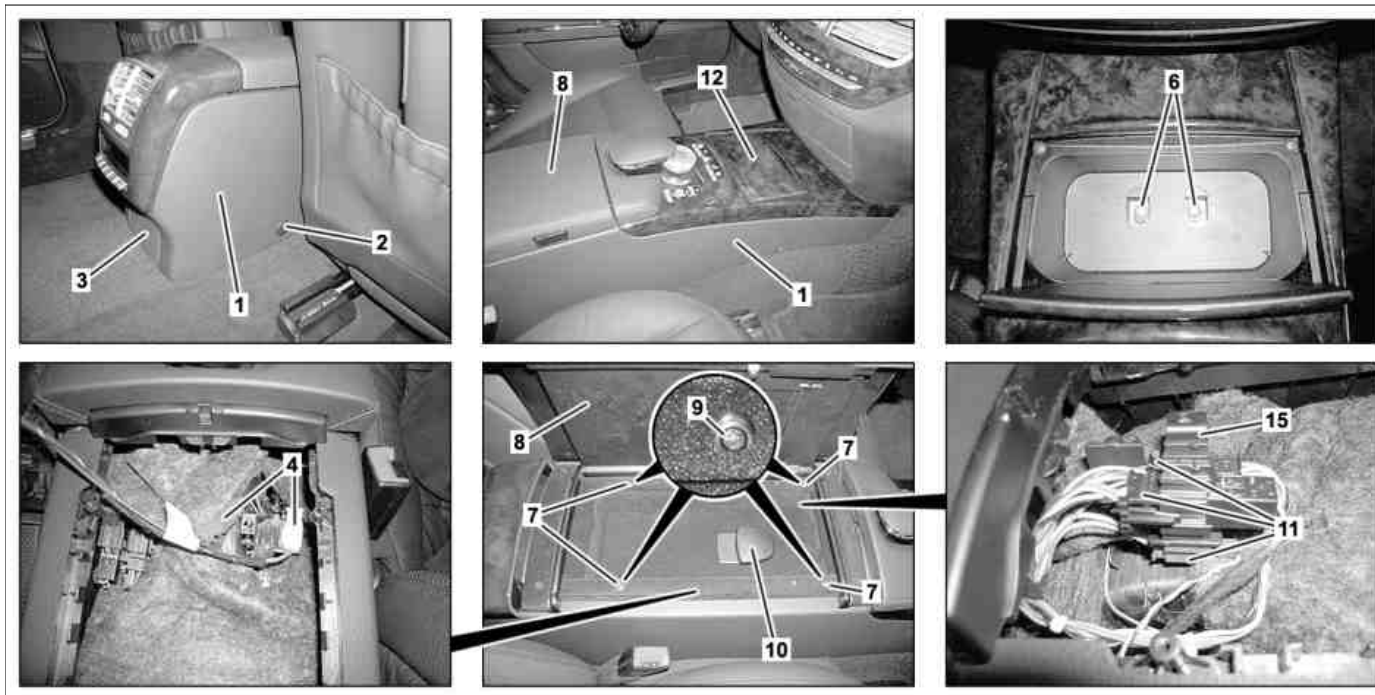

P68.20-4191-09

Shown on vehicle with code (582)

Rear air conditioning

- 1 Center console
- 2 Cap
- 3 Housing
- 4 Electrical connectors (with code (386) Preinstallation for cell phone telephone, UPCI system or with code (388) Cell phone telephone, UPCI system)


- 6 Bolts
- 7 Cover plug
- 8 Armrest lid
- 9 Screw

- 10 Contact plate
- 11 Electrical connectors
- 12 Front stowage compartment lid
- 15 Bracket

Shown on vehicle without code (582)

Rear air conditioning

- 11 Electrical connectors
- 14 Maintenance flap

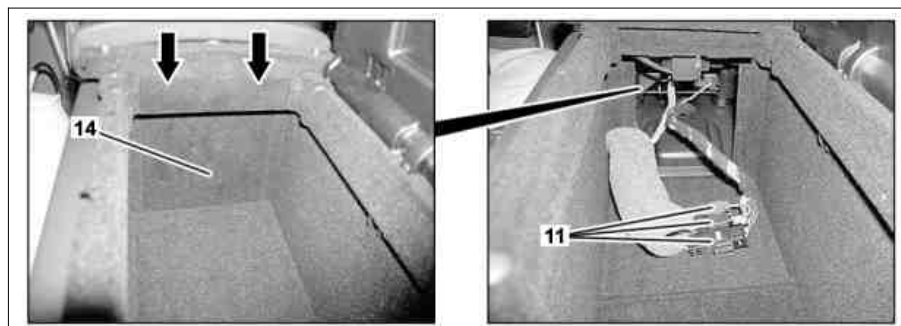

P68.20-4195-04

☒ ☒	Remove/install		
1	Move front seats toward front to end position		
2	Remove rear paneling from center console		AR68.20-P-5169SX
3	Remove housing (3) for 12 V socket or rear ashtray		AR68.20-P-2420SX
4	Unclip cap (2) on both sides and unscrew bolts below	i Installation: Check mechanism of front ashtray for proper function, if necessary loosen threaded connection of center console (1) and tighten center console (1) without tension.	
5	Adjust front seats toward rear to end position		
6	Switch off ignition and withdraw transmitter key or Keyless Go start/stop button from the EIS [EZS] control unit	i Keyless Go start/stop button only for vehicles with code (889) Keyless Go.	
7	Open front stowage compartment lid (12)		

8	Remove cupholder	On vehicles with code (310) Double front cup holder.	
9	Remove inserting device		
10	Remove bolts (6)	i Installation: Ensure that center console (1) is installed without tension.	
11.1	Open armrest lid (8) and unclip maintenance flap (14)	For vehicles without code (582) AC in rear.	
11.2	Open armrest cover (8) and remove cover plug (7) in stowage compartment and remove bolts (9)	For vehicles with code (582) Rear air conditioner.	
12	Lift up armrest lid (8) and disconnect electrical connector (4)	On vehicles with code (582) Air conditioning system in rear and code (386) Preinstallation for telephone "Cell phone" UHI system or code (388) Telephone "Cell phone" UHI [Universal Portable Cell Phone Interface system].	
13	Remove armrest lid (8)	For vehicles with code (582) Rear air conditioner.	
14	Unlock bracket (15) of electrical wiring harness and pull out upwards	For vehicles with code (582) Rear air conditioner.	
15	Expose electric wiring harness in center console (1) and disconnect electrical connectors (11)	i Number of electrical connectors (11), if equipped.	
16	Lift up rear center console (1) and remove from vehicle	i Aid of helper required.	
17	Install in the reverse order		