



MODEL 221.0 /1

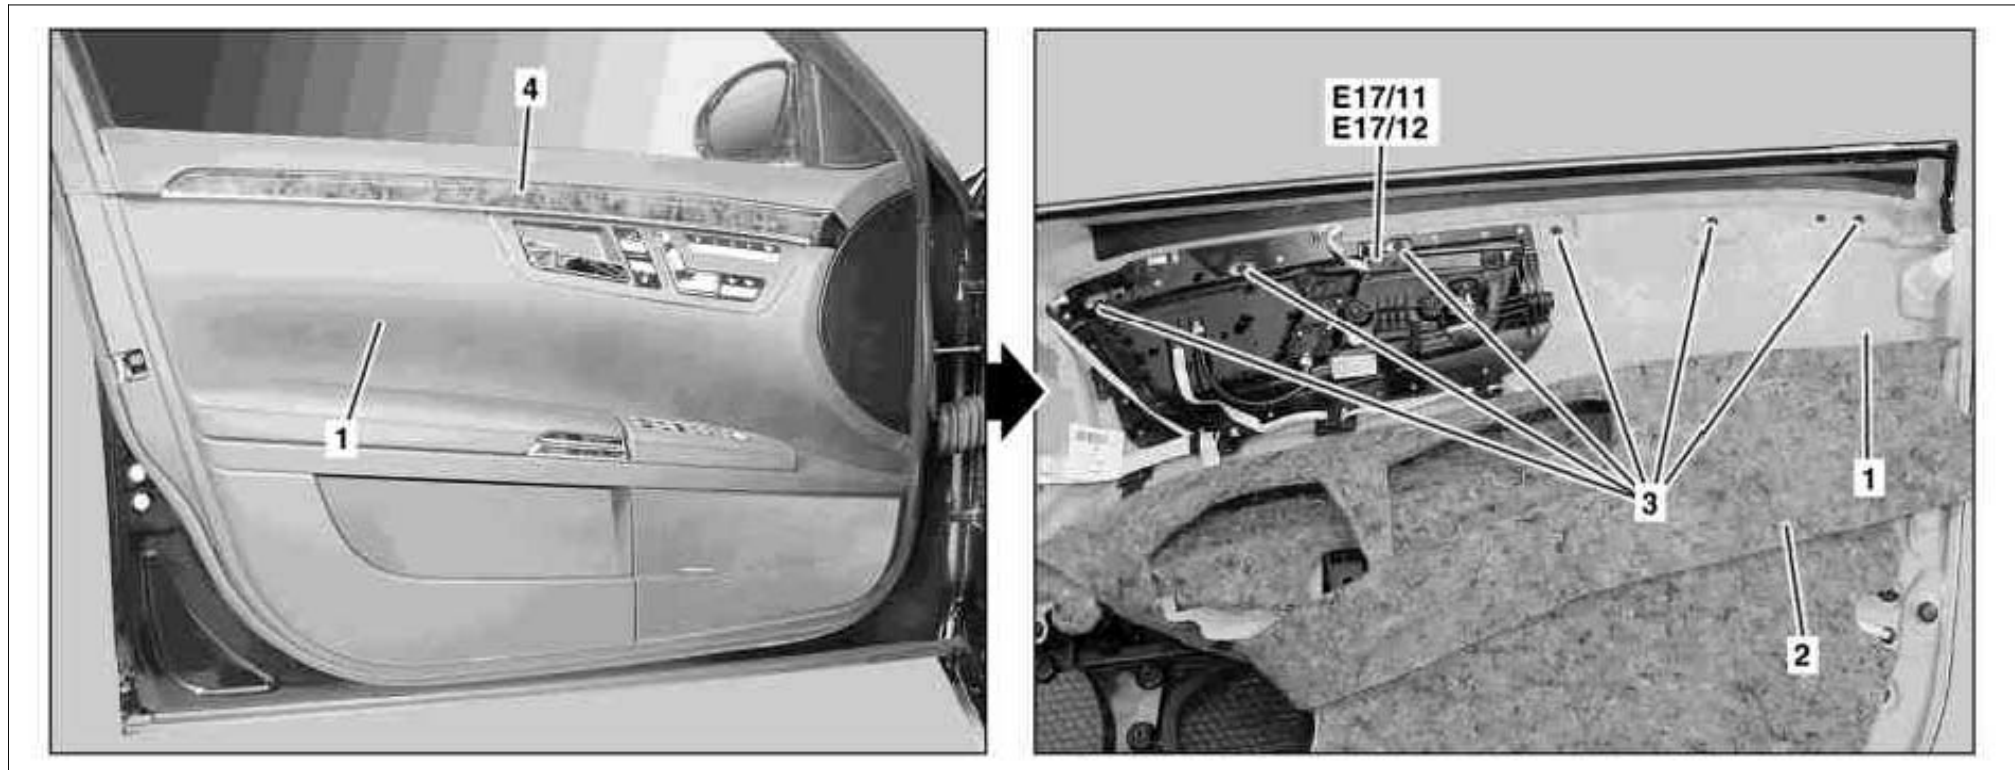

P72.10-3270-08

- 1 Door lining
 2 Insulating mat
 (with code (595) Heat and noise insulating infrared-reflective laminated glass for rear and side windows or code (596) Heat-insulating glass)

- 3 Bolts
 4 Trim strip
 E17/11 Left front door inside handle illumination
 E17/12 Right front door inside handle illumination



Remove/install

1	Remove door liner (1) from front door	⚠ Lay door lining (1) front side down on suitable subsurface to prevent damage Vehicles without code (Z07) Top protection Vehicles with code (Z07) Top protection	AR72.10-P-1000SX AR72.10-P-1000SXS
2.1	Loosen sound deadening mat (2) from door lining (1) until bolts (3) are accessible.	On vehicles with code (595) Heat and noise insulating infrared reflecting laminated glass for rear and side windows or with code (596) Heat insulating glass i Installation: Glue insulating mat (2) to door lining (1).	*BR00.45-Z-1002-02A
3	Remove left front door inside handle illumination (E17/11) or right front door inside handle illumination (E17/12)		
4.1	Disconnect electrical connector from trim strip (4).	On vehicles with code (876) interior light package	
5	Remove bolts (3)		
6	Remove trim strip (4)		
7	Install in the reverse order		

Repair materials

Number	Designation	Order number
BR00.45-Z-1002-02A	Adhesive Terokal 2444	A 000 989 92 71