


MODEL 221.0

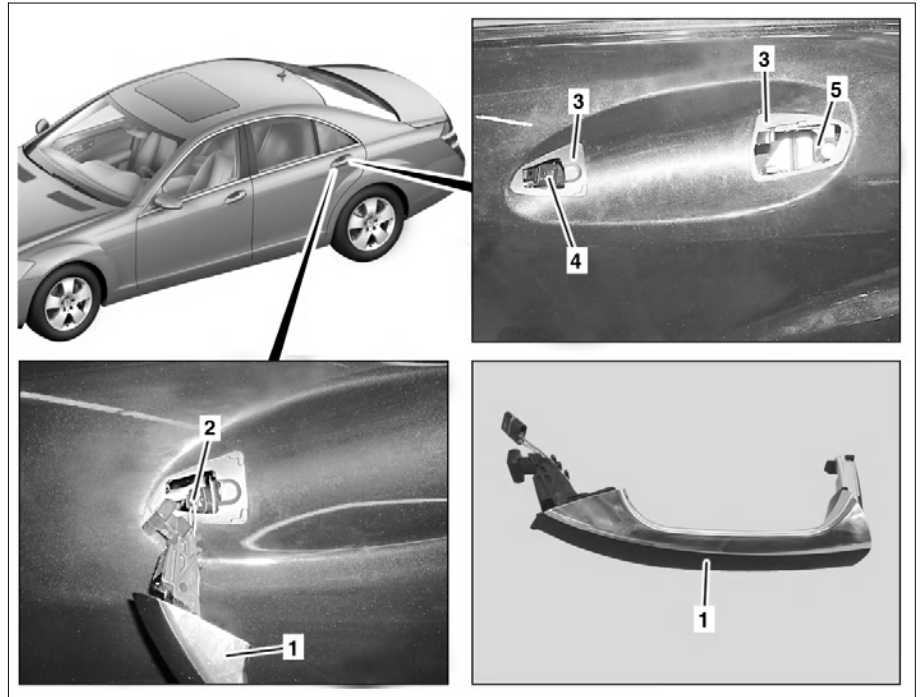


MODEL 221.1 except CODE (Z07) Top protection

Shown on model 221.0 with code (889)
Keyless Go

- 1 Outer door handle
- 2 Electrical connector
(with code (889) Keyless Go)
- 3 Seal
- 4 Connection
- 5 Bearing bracket



P72.12-2663-06

 	Remove/install		
1	Remove outer door handle guide (1) from rear door		*BA72.12-P-1005-01M
2.1	Pull outer door handle (1) out of bearing bracket (5) toward rear and remove		
2.2	Pull outer door handle (1) out of bearing bracket (5) toward rear, disconnect electrical connector (2) and remove outer door handle (1)		
3	Install in the reverse order		

 Rear door

Number	Designation	Model 221
BA72.12-P-1005-01M	Bolt, guide ton rear door	Nm 3