


MODEL 221.0

MODEL 221.1 except CODE (Z07) Top protection

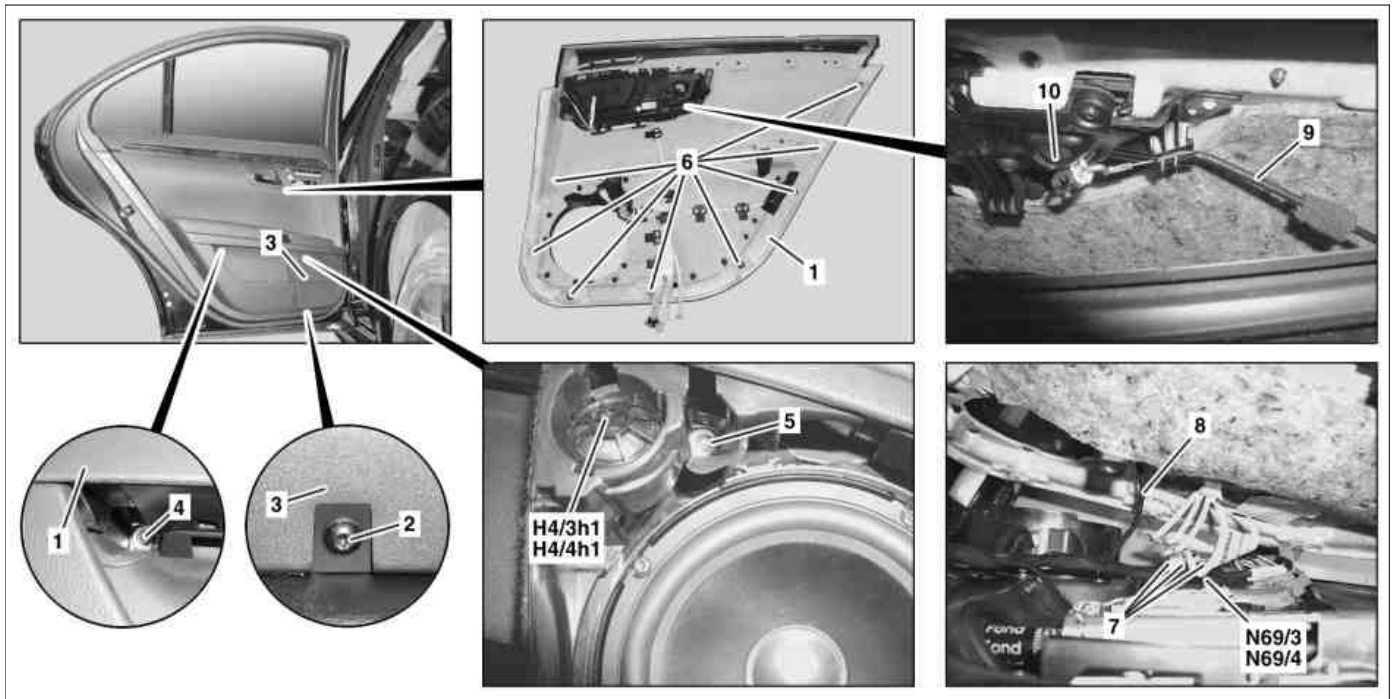

P72.12-2662-09

Shown on model 221.0

- 1 Door lining
- 2 Bolt
- 3 Speaker cover
- 4 Bolt
- 5 Bolt (on model 221.0)

- 6 Clip
- 7 Electrical connectors
- 8 Electrical line
- 9 Control cable
- 10 Door opener










- H4/3h1 Left rear door tweeter
- H4/4h1 Right rear door tweeter
- N69/3 Rear left door control unit
- N69/4 Right rear door control unit

Shown on model 221.1

- 1 Door lining
- 11 Bolt (on model 221.1)




P72.12-2665-04

 	Remove/install		
1	Wind crank window fully down		
2.1	Unscrew bolt (2) and unclip speaker cover (3).	With model 221.0	
			*110589035900
3	Unscrew screw (4)		*BA72.12-P-1009-01M
4.1	Unscrew bolt (5).	With model 221.0	
			*BA72.12-P-1009-01M
4.2	Unscrew bolt (11).	With model 221.1	
			*BA72.12-P-1009-01M
5	Unclip door lining (1) and remove from rear door until electrical connector (7) are accessible..	 Move mounting wedge directly onto clips (6) and ensure that retainer tabs on clips do not tear out of door lining (1).	
			*110589035900
		 Installation: Replace damaged clips (6).	

6	Disconnect electrical connectors (7) from left rear door control unit (N69/3) or right rear door control unit (N69/4) and connector of electrical line (8) from left rear door tweeter (H4/3h1) or right rear door tweeter (H4/4h1)	i The number of electrical connectors (7) can vary depending on the equipment.	
7	Unhook Bowden cable (9) from door opener (10) and remove door lining (1).		
8	Install in the reverse order		

Nm Rear door

Number	Designation		Model 221
BA72.12-P-1009-01M	Bolt, door lining to door module	Nm	8

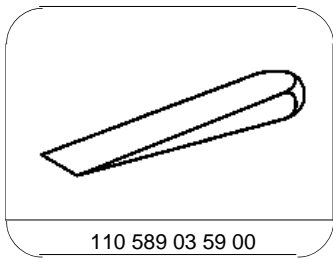

110 589 03 59 00

Mounting wedge