


Model 117, 156, 176, 205, 213, 217, 222, 242, 246, 253

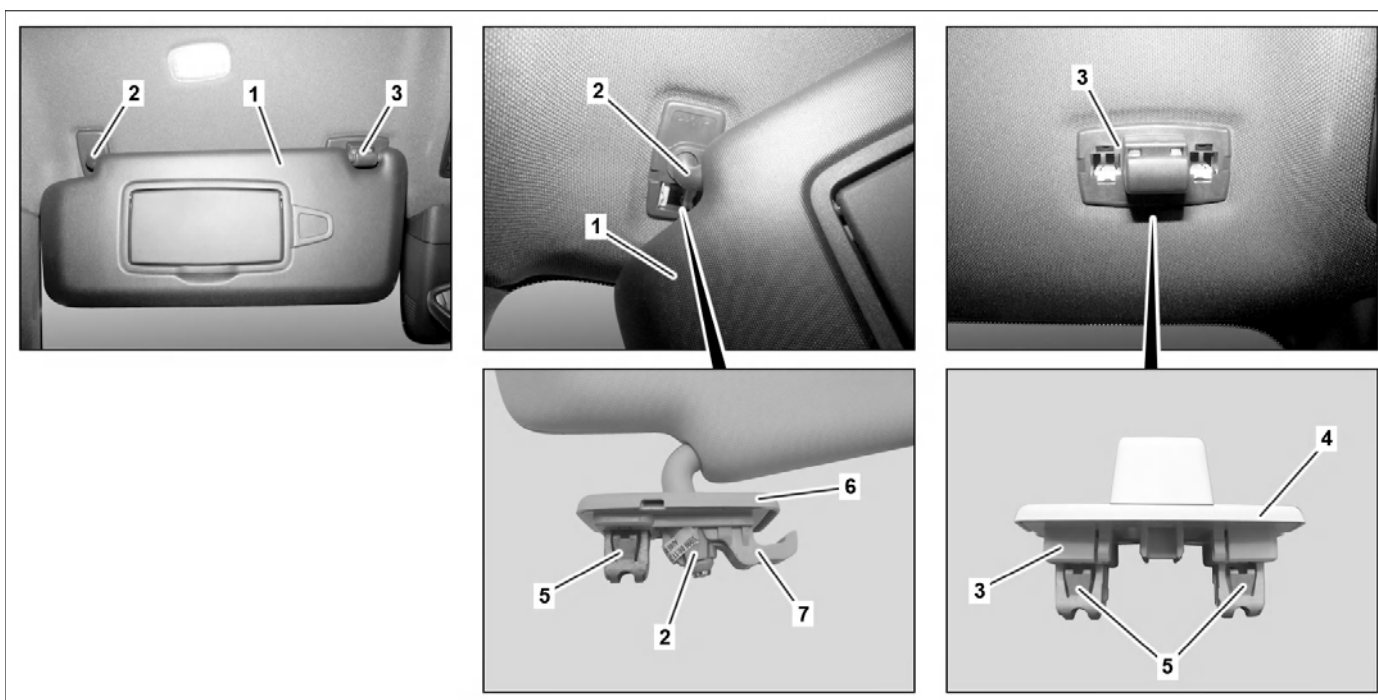


P68.60-2353-09

Shown on MODEL 176

- 1 Sun visor
- 2 Hinge
- 3 Bracket
- 4 Cover
- 5 Clips
- 6 Cover
- 7 Hook

Shown on model 213 with code 494 (USA version)


- 2 Hinge
- 3 Bracket
- 8 Additional sun visor

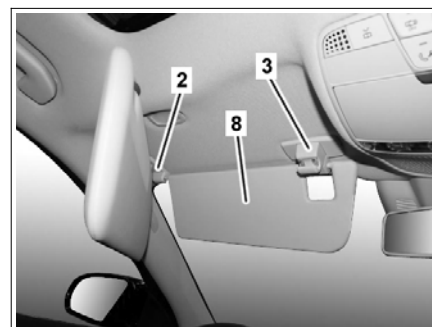

P68.60-2467-01

☒	Remove		
1	Unclip sun visor (1) from bracket and swivel to side		
2	Unclip cover (6) from hinge (2) and remove	☑ Clip remover	<a href="#">*452589016300</a>
3	Unclip cover (4) from bracket (3) and remove	☑ Clip remover	<a href="#">*452589016300</a>
4	Press clips (5) together on bracket (3) and remove bracket (3)	ⓘ Model 213, 222 with code 460 (Canada version) Model 213, 222 with code 494 (US version) Model 213, 222 with code 543 (Double sunblind) Model 213 with code P09 (Sun protection package) Remove additional sun visor (8) and bracket (3) together.	
5	Press clips (5) together on hinge (2) and remove sun visor (1)		

☒	Install		
6	Clip cover (6) and clip (5) into hinge (2)		
7	Insert hinge (2) in roof paneling and clip in		
8	Clip cover (4) and clips (5) into bracket (3)		
9	Insert additional sun visor (8) in hinge (2)	Model 213, 222 with code 460 (Canada version) Model 213, 222 with code 494 (US version) Model 213, 222 with code 543 (Double sunblind) Model 213 with code P09 (Sun protection package)	
10	Clip backing (3) into roof paneling		
11	Clip sun visor (1) into bracket (3)		

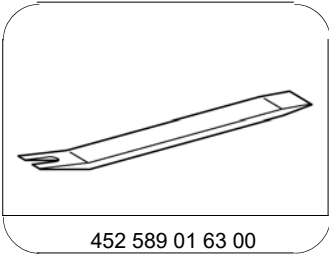

452 589 01 63 00

Clip remover