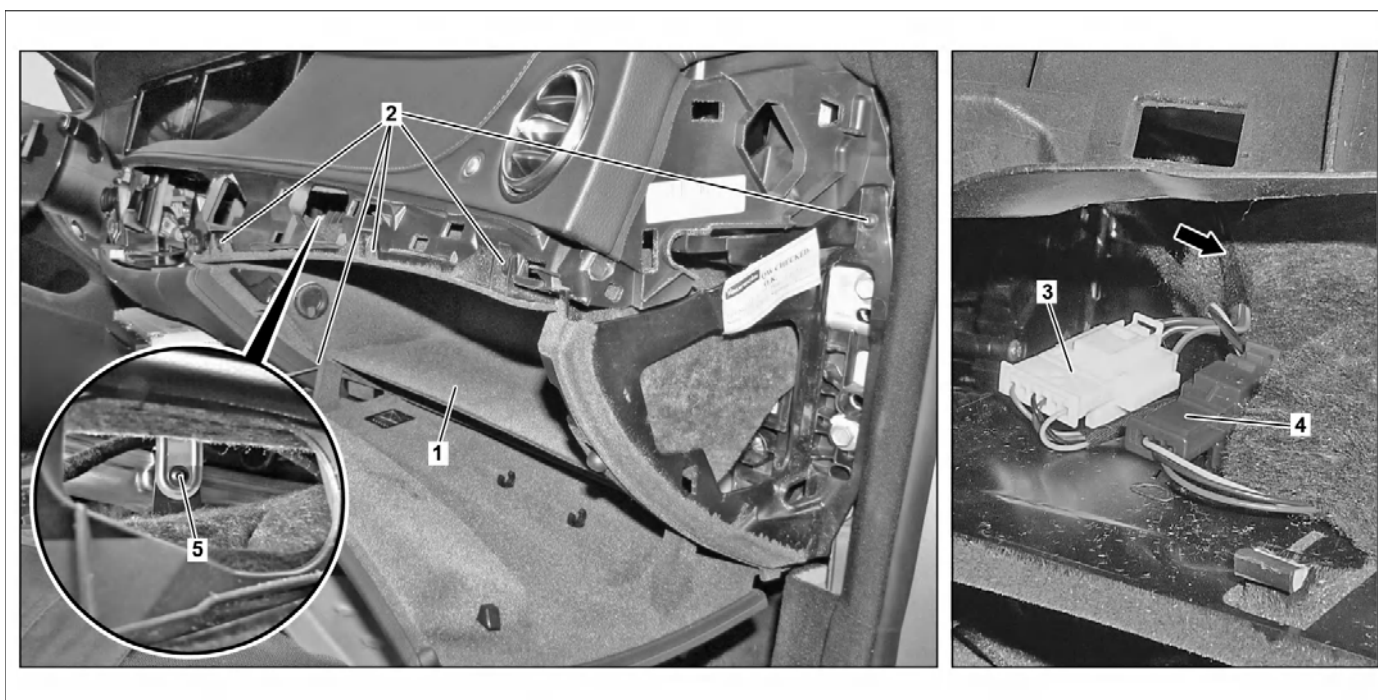


MODEL 222.0/1/9

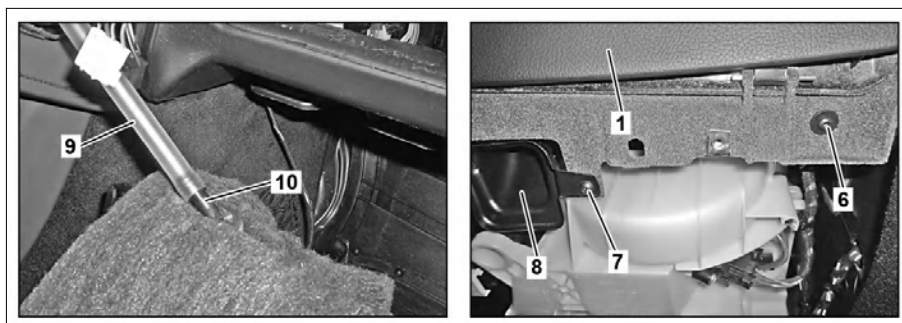


P68.10-4604-09





- 1 Glove compartment
- 2 Screw
- 3 Electrical connector

- 4 Electrical connector
- 5 Screw

- 1 Glove compartment
- 6 Screw
- 7 Screw
- 8 Air duct
- 9 Hose
- 10 Fragrance generator connection



P68.10-4612-04

 	Remove/install		
1	Remove flacon from glove compartment	Vehicles with CODE P21 (AIR BALANCE package)	
2	Remove trim piece from passenger side instrument panel		AR68.10-P-1180LF
3	Remove cover below right dashboard		AR68.10-P-1520LF
4	Unscrew bolt (7) and remove air duct		
5	Remove screw/bolt (6)		
6	Remove screw/bolt (5)	 Bolt, front passenger airbag unit to cross member	*BA91.60-P-1002-011
7	Remove bolts (2)		
8	Pull glove compartment (1) out of instrument panel basic carrier until electrical connectors (3, 4) are accessible		
9	Detach electrical connections (3, 4)	 Electrical connector (3) only present on vehicles with CODE P21 (AIR BALANCE package).	

10	Remove hose from glove compartment ventilation		
11	Separate hose (9) from odor generator connection (10)	Vehicles with CODE P21 (AIR BALANCE package)	
12	Remove glove compartment (1)		
13	Install in the reverse order		

Nm Airbag

Number	Designation		MODEL 222
BA91.60-P-1002-01I	Bolt, front passenger airbag unit to cross member	Nm	3,5