
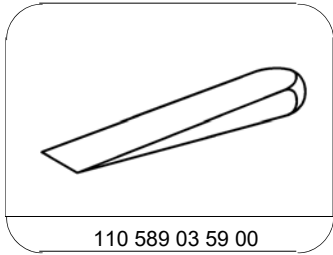


P54.21-2652-09

- |  |   |   |
|--|---|---|
| 1 Armrest  | 7 Maintenance flap (without code (582) Rear air conditioning) | 12 Screwdriver  |
| 2 Release button   | 8 Electrical connectors                                       | 13 Adjustment wheel (without code (582) Rear air conditioner) |
| 3 Unlock button (without code (582) Rear air conditioning) | 9 Bolts   | 14 Cover  |
| 4 Bolts  | 10 Trim   | A40/9 Front central operating unit                            |
| 5 Hinge cover  | 11 Telephone or stowage compartment                           |   |
| 6 Screw  |   |   |

☒ ☒	Remove/install		
1.1  <b>AD</b>	Temporarily store basic data from front central operating unit (A40/9) in STAR DIAGNOSIS  Connect STAR DIAGNOSIS and read out fault memory	When replacing the front central operating unit (A40/9).  <b>i</b> <b>Installation:</b> Transfer the temporarily stored basic data to the new front central operating unit (A40/9).	  <b>AD00.00-P-2000-04A</b>
2	Switch off ignition and withdraw transmitter key or Keyless Go start/stop button from the EIS [EZS] control unit	<b>i</b> Keyless Go start/stop button only for vehicles with code (889) Keyless Go.	
3	Remove turn/push control		<b>AR54.21-P-0501SX</b>
4.1	Press release button (3) and lift armrest (1) towards the rear	On vehicles without code (582) Rear air conditioning	
4.2	Press release button (2) and open telephone or stowage compartment (11)	On vehicles with code (582) Rear air conditioning	
5	Unlock telephone or stowage compartment (11) using suitable tools through the openings (arrows) and lift towards the rear	On vehicles with code (582) Rear air conditioning	
6	Unclip cover (14) from center console	<b>☒</b>	<b>*110589035900</b>
7	Close off stowage compartment ventilation via adjustment wheel (13) and unclip maintenance flap (7) using a suitable screwdriver (12)	On vehicles without code (582) Rear air conditioning	
8	Expose wiring harness in center console and separate electrical connectors (8)	<b>i</b> The number of electrical connectors (8) varies depending on the vehicle equipment.	
9	Remove trim at rear of center console		<b>AR68.20-P-5169SX</b>
10	Unclip hinge cover (5)		
11	Remove bolts (4, 6)		
12.1	Lift trim (10) at front, guide it backwards out of center console together with telephone or stowage compartment (11) and remove	On vehicles without code (386) Preinstallation for telephone "Handy", UPCI system or without code (388) Telephone "Handy", UPCI system	

		<b>i</b> <b>Installation:</b> Ensure that the wiring harness of the front central operating unit (A40/9) is correctly routed.	
12.2	Lift trim (10) until the underside of the front central operating unit (A40/9) is accessible	On vehicles with code (386) Preinstallation for telephone "Handy", UPCI system or with code (388) Telephone "Handy", UPCI system <b>i</b> <b>Installation:</b> Ensure that the wiring harness of the front central operating unit (A40/9) is correctly routed.	
13 	Remove bolts (9) and remove front central operating unit (A40/9) from trim (10) Information on preventing damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
14	Install in the reverse order		



110 589 03 59 00

Mounting wedge