
MODEL 221.0

Paneling in rear on backrest

MODEL 221.1 except CODE (Z07) Top protection

Paneling in rear on backrest

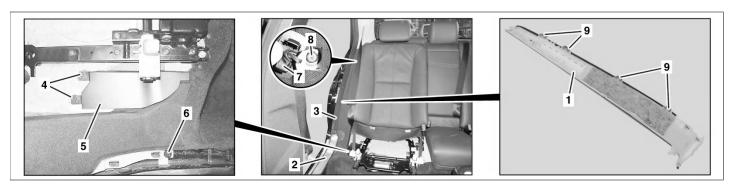

P68.30-3208-07


Shown on right paneling

 1
 Trim
 4
 Nuts
 7
 Cover

 2
 Door sill molding
 5
 Cover
 8
 Bolt

 3
 Edge guard
 6
 Nut
 9
 Plate clamps

XX	Removing, Install		
1	Remove left or right rear seat cushion and lay down to side with electrical line connected.	Model 221.0/1 without code (223) Rear bench seat with electrically adjustable outer seats, lumbar supports as well as pneumatically adjustable head restraints or Model 221.1 with code (224) Design rear bucket seat Model 221.0/1 with code (223) Rear bench sea with electrically adjustable outer seats, lumbar supports as well as pneumatically adjustable head restraints or Model 221.1 with code (224) Design rear bucket seat	
2	Remove door sill molding (2)		AR68.30-P-4100SX
3	Detach edge guard (3) in area of door sill molding (2) and wheelhouse		
4	Unscrew nuts (4) from cover (5) and remove cover (5).		
5	Unscrew nut (6)		
6	Loosen cover (7) and screw out bolt (8)		
7	Unclip paneling (1) from bottom upward and remove	3	*110589035900
8	Install in the reverse order		

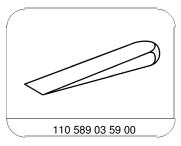

Wedge tool