


MODEL 216.3, 221.0 /1

Shown on model 221 up to 31.5.09 on left taillamp

- 1 Electrical connector
2 Nut

- E3 Left taillamp
E4 Right taillamp

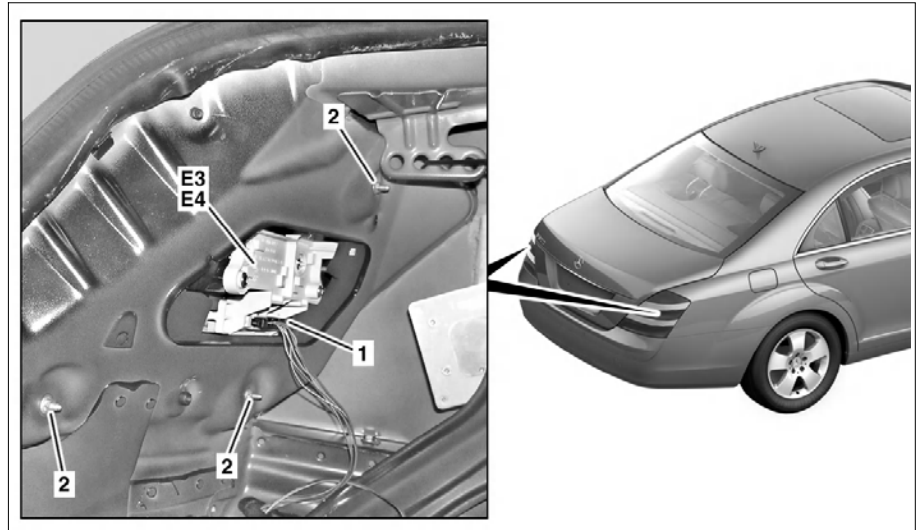

P82.10-4294-05

☒ ☒	Remove/install		
1	Detach left or right paneling on side of luggage compartment and swivel inward	Vehicles without code (Z07) Top protection Vehicles with code (Z07) Top protection	AR68.30-P-4600SX AR68.30-P-4600SXS
2	Unscrew nuts (2), unplug electrical connector (1) and remove left taillamp (E3) or right taillamp (E4)	i In model 216 the left taillamp (E3) and the right taillamp (E4) are screwed on with four nuts (2).	
3	Detach detachable parts from left taillamp (E3) or from right taillamp (E4)	Only when replacing on model 221.0 /1 up to 31.5.09 except CODE (800) Model year 2010 i Installation: Attach new trim panels to left taillamp (E3) or right taillamp (E4). Reuse screws of LED board.	AR88.85-P-9814SX
4	Install in the reverse order		