


Illustrated on model 221

- 1 Water collector
- 2 Seal
- 3 Nut
- 4 Bolt

- M6/6 Master wiper motor
- M6/7 Slave wiper motor

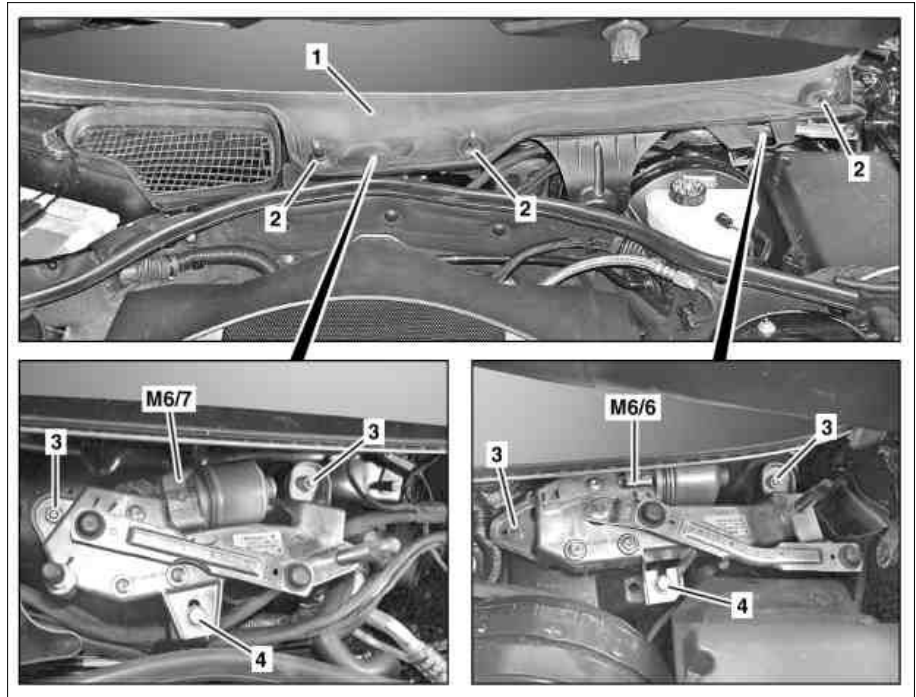

P82.30-2550-06

	Remove/install		
1	Remove wiper arms		AR82.30-P-6100SX
2	Unclip water collector (1)	Installation: Ensure that gaskets (2) seat properly.	
3	Unscrew nuts (3) from master wiper motor (M6/6) and slave wiper motor (M6/7)		*BA82.30-P-1002-01L
4.1	Loosen bolt (4) and unscrew by a few threads	Model 216 Installation: Ensure that bolt washer (4) is seated correctly 	*BA82.30-P-1002-01L
4.2	Unscrew bolt (4)	Model 221 	*BA82.30-P-1002-01L
5	Lift master wiper motor (M6/6) or slave wiper motor (M6/7) until the electrical connector on the master wiper motor (M6/6) or slave wiper motor (M6/7) is accessible		
6	Detach electrical connector and remove master wiper motor (M6/6) or slave wiper motor (M6/7)		
7	Install in the reverse order		

Windshield wiper

Number	Designation		Model 216	Model 221.0/1
BA82.30-P-1002-01L	Nut/screw for wiper motor to body	Nm	20	20