


MODEL 211.0

- 1 Expanding clip
- 2 Bolt
- 3 Paneling

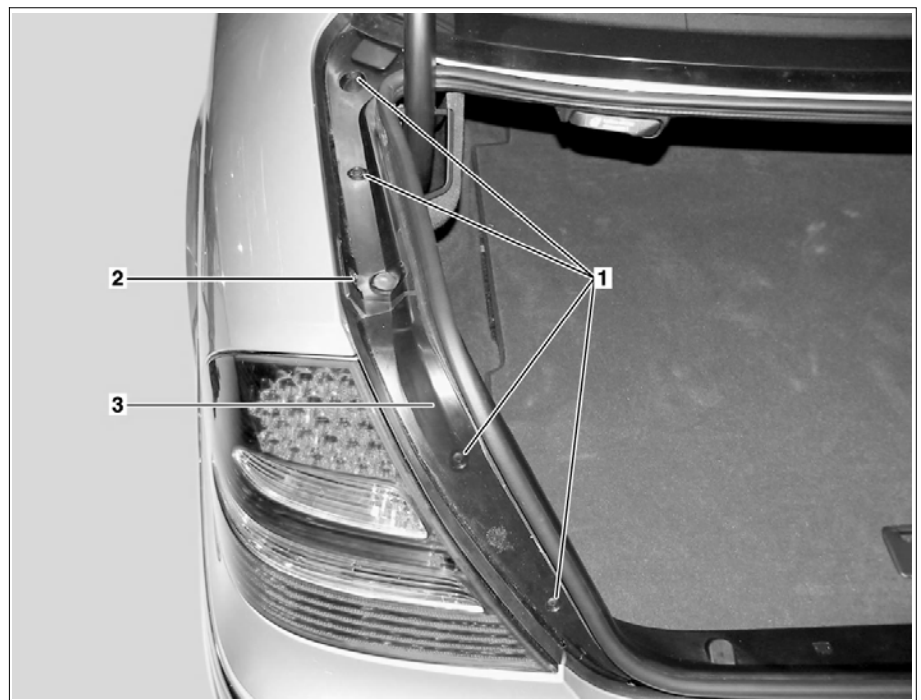

P64.30-2002-06

☒ ☒	Remove/Install		
1	Open trunk lid	i	See Operating Instructions
2	Unclip expanding clip (1)		
3	Remove bolt (2)		
4	Detach paneling (3)		
5	Install in the reverse order		