


## MODEL 219.3

- 1 Expanding clip
- 2 Expanding clip
- 3 Screw
- 4 Paneling

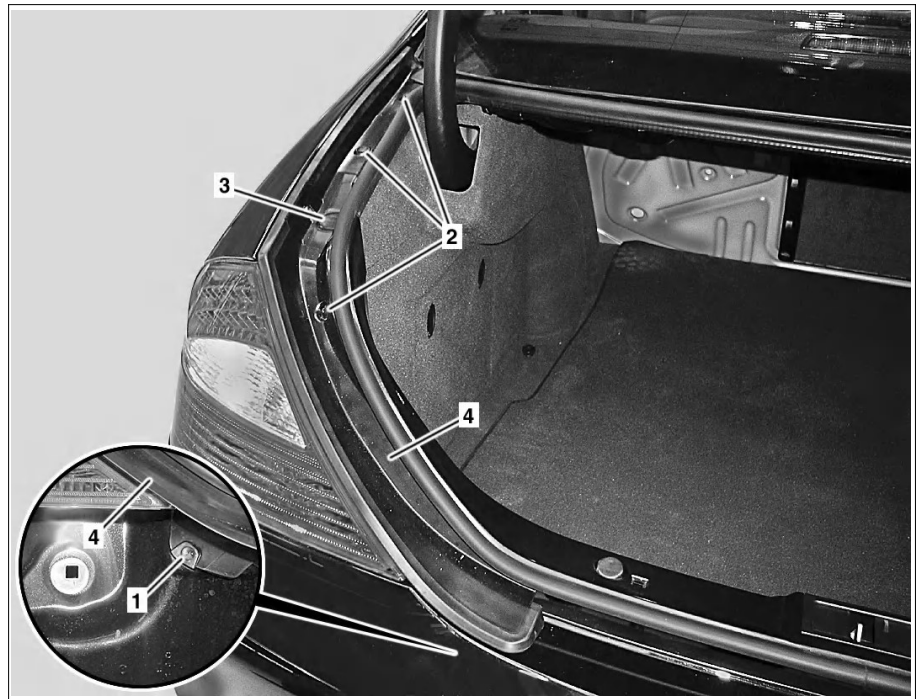

P64.30-2003-06

☒ ☒	Remove/Install		
1	Unclip expanding clip (1) behind bumper		
2	Open trunk lid	<b>i</b> See Operating Instructions	
3	Unclip expanding clips (2)		
4	Unscrew bolt (3).		
5	Remove paneling (4)		
6	Install in the reverse order		