
Model	215, 216
Model	217
	with code 487 (Active Body Control (ABC))
Model	220
	with code 487 (Active Body Control (ABC))
	except code 979 (Special protection MB Guard)
Model	221
	with code 487 (Active Body Control (ABC))
	except code Z07 (B7 armoring on special protection version)
Model	222, 230, 231
	with code 487 (Active Body Control (ABC))

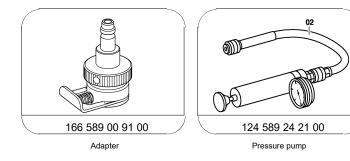

Shown on MODEL 231


- 084 Pressure pump
- 1 Adapter
- 2 Expansion reservoir



P32.50-2350-12

Shown on model 220

084	Pressure pump
084a	Pressure hose
2	Expansion reservoir

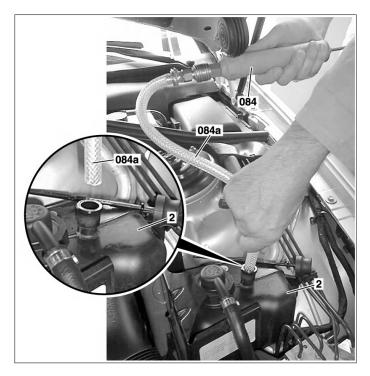

P32.50-2076-12

 $\boxed{\mathbf{i}}$ A new tandem pump is bled as a result of the pressure buildup in the ABC system. The following special tools are required: $\boxed{9}$ pressure pump (084) and

S adapter (1).

- 1 Connect suitable pressure hose (084a) to pressure pump (084).
- 2 Pull dipstick out of the expansion reservoir (2).
- Model 217

 with code 487 (Active Body Control (ABC))
 Model 222
 with code 487 (Active Body Control (ABC))
 Model 231
 with code 487 (Active Body Control (ABC))
 Mount adapter (1) to expansion reservoir (2).
- 4.1 Model 215, 216 Model 220 with code 487 (Active Body Control (ABC)) except code 979 (Special protection MB Guard) Model 221 with code 487 (Active Body Control (ABC)) except code Z07 (B7 armoring on special protection version) Model 230 with code 487 (Active Body Control (ABC)) Insert the pressure hose (084a) into the fitting of the dipstick opening and press on firmly.

i 2nd person required.

- 4.2 Model 217 with code 487 (Active Body Control (ABC)) Model 222 with code 487 (Active Body Control (ABC)) Model 231 with code 487 (Active Body Control (ABC)) Connect pressure pump (084) to adapter (1).
- 5 Use pressure pump (084) to produce a pressure of approx. 1 bar.
- 6 Start engine and wait until pressure at pressure pump (084) has dropped to 0 bar.