Model 215, 216 Model 217

with code 487 (Active Body Control (ABC))

Model 220

with code 487 (Active Body Control (ABC))

except code 979 (Special protection MB Guard)

Model 221


with code 487 (Active Body Control (ABC))

except code Z07 (B7 armoring on special protection version)

Model 222, 230, 231

with code 487 (Active Body Control (ABC))



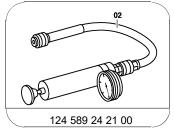

Adapter

Pressure pump

Shown on MODEL 231

084 Pressure pump

1 Adapter


2 Expansion reservoir



P32.50-2350-12

Shown on model 220

084 Pressure pump 084a Pressure hose 2 Expansion reservoir

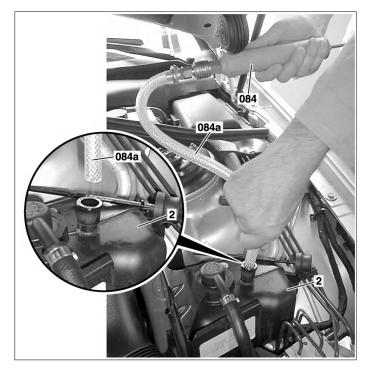

P32 50-2076-12

 $\fbox{\textbf{i}}$ A new tandem pump is bled as a result of the pressure buildup in the ABC system.

The following special tools are required: $\boxed{\mathcal{G}}$ pressure pump (084) and $\boxed{\mathcal{G}}$ adapter (1).

- Connect suitable pressure hose (084a) to pressure pump (084).
- 2 Pull dipstick out of the expansion reservoir (2).
- 3 Model 217
 with code 487 (Active Body Control (ABC))
 Model 222
 with code 487 (Active Body Control (ABC))
 Model 231
 with code 487 (Active Body Control (ABC))
 Mount adapter (1) to expansion reservoir (2).
- 4.1 Model 215, 216
 Model 220
 with code 487 (Active Body Control (ABC))
 except code 979 (Special protection MB Guard)
 Model 221
 with code 487 (Active Body Control (ABC))
 except code Z07 (B7 armoring on special protection version)
 Model 230
 with code 487 (Active Body Control (ABC))
 Insert the pressure hose (084a) into the fitting of the dipstick opening and press on firmly.

i 2nd person required.

- 4.2 Model 217
 with code 487 (Active Body Control (ABC))
 Model 222
 with code 487 (Active Body Control (ABC))
 Model 231
 with code 487 (Active Body Control (ABC))
 Connect pressure pump (084) to adapter (1).
- Use pressure pump (084) to produce a pressure of approx. 1 bar.
- 6 Start engine and wait until pressure at pressure pump (084) has dropped to 0 bar.