

MODEL 221.0 /1 up to 31.5.09


with CODE (386) Preinstallation for telephone "Cell phone", UPCI system

with CODE (388) Telephone "Cell phone", UPCI system


except CODE (800) Model year 2010

Shown on removed center console (1)

- 1 Center console
- 2 Front ashtray housing with cover
- 3 Front stowage compartment with cover
- 4 Handrest
- 5 Turn/push control
- 6 Unlock button (without code (582) Rear air conditioning)
- 7 Release button
- 8 Armrest lid
- 9 Cover
- 10 Trim

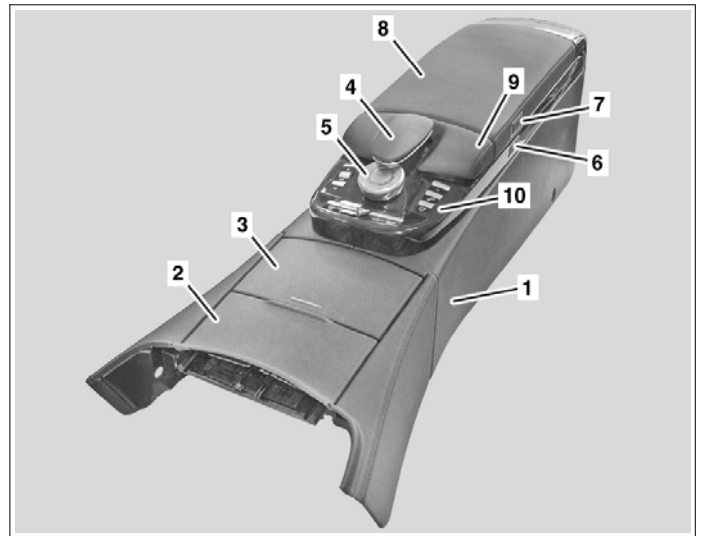


P68.20-3570-11

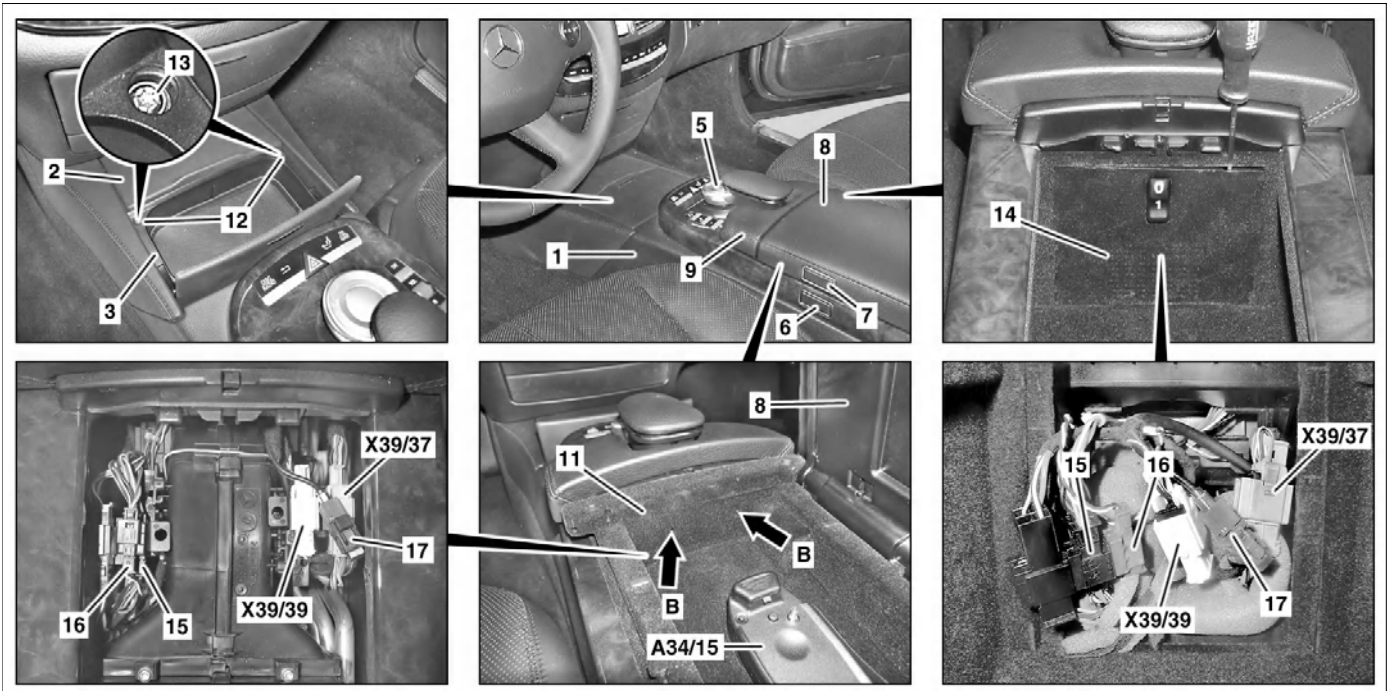





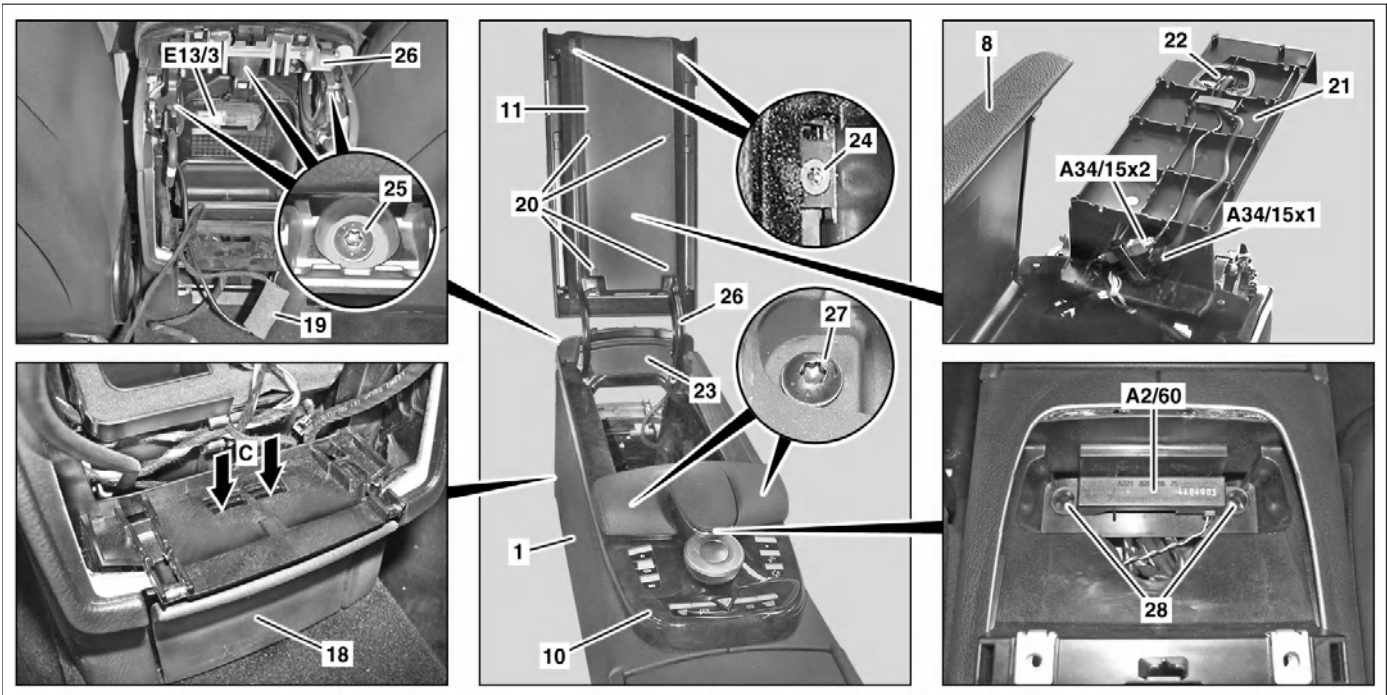

P68.20-3571-09

- | | | |
|--|--|---|
| 1 Center console | 9 Cover | 16 Electrical connector (with code (889) Keyless Go) |
| 2 Front ashtray housing with cover | 11 Stowage compartment | 17 Electrical connector |
| 3 Front stowage compartment with cover | 12 Cover plug | |
| 5 Turn/push control | 13 Screw | A34/15 UHI portable CTEL holder (Universal Handy Interface) |
| 6 Unlock button (without code (582) Rear air conditioning) | 14 Maintenance flap (without code (582) Rear air conditioning) | X39/37 CTEL separation point |
| 7 Release button | 15 Electrical connector | X39/39 Handy connector |
| 8 Armrest lid | | |




P68.20-3572-09

- | | | | | | |
|----|---|----|----------------|----------|---|
| 1 | Center console | 23 | Cover | A34/15x1 | Connector 1, UPCI [UHI] portable CTEL holder (Universal Handy Interface) |
| 8 | Armrest lid | 24 | Screw | A34/15x2 | Connector 2, UPCI [UHI] cell phone holder (Universal Handy Interface) |
| 10 | Trim | 25 | Screw | E13/3 | Stowage compartment illumination (without code (582) Rear air conditioning) |
| 11 | Stowage compartment | 26 | Hinge | A2/60 | Keyless go center console antenna (with code (889) Keyless Go) |
| 18 | Rear housing | 27 | Screw | | |
| 19 | Electrical connector (without code (582) Rear air conditioning) | 28 | Expansion clip | | |
| 20 | Bolts | | | | |
| 21 | Floor panel | | | | |
| 22 | Contact plate | | | | |


 	Disassemble/assemble		
1	Remove center console (1)	For removing stowage compartment (11), telephone wiring harness, wiring harness for front ashtray housing with cover (2) and for replacing basic carrier for center console (1).  All other parts can be removed with center console (1) installed.	AR68.20-P-2000SX
2	Remove front stowage compartment with cover (3).		
3	Remove front ashtray housing with cover (2) toward rear from center console (1) and disconnect electrical connector		
4	Remove turn/push control (5) for front central operating unit.		AR54.21-P-0501SX
5.1	Press release button (6) and open stowage compartment (11)	On vehicles without code (582) Rear air conditioning	
5.2	Actuate release button (7), open armrest cover (8), unlock stowage compartment (11) through holes (arrows B) at front with suitable tool and open.	On vehicles with code (582) Rear air conditioning	
6	Unclip covering (9)		*110589035900
7	Switch off ignition and withdraw transmitter key or Keyless Go start/stop button from the EIS [EZS] control unit	 Keyless Go start/stop button only for vehicles with code (889) Keyless Go.	
8	Close stowage compartment ventilation via actuator wheel in maintenance flap (14) and unclip maintenance flap (14).	On vehicles without code (582) Rear air conditioning	
9	Expose electric wiring harness in center console (1) and expose electrical connector (15) as well as electrical connector (16) and disconnect	 Electrical connector (16) only on vehicles with code (889) Keyless Go.	
10	Remove rear paneling from center console (1).		AR68.20-P-5169SX

11	Unlock rear housing (18) (arrows C), remove and disconnect electrical connector at rear.		
12	Expose electrical connector on stowage compartment illumination (E13/3) as well as electrical connector (19) and disconnect	On vehicles without code (582) Rear air conditioning	
13	Open stowage compartment (11), unscrew bolts (20), close stowage compartment (11) and open armrest cover (8).	i To remove contact plate (22) for UPCI cell phone holder (universal handy interface) (A34/15).	
14	Remove UPCI cell phone holder (universal handy interface) (A34/15) and raise floor panel (21) with pulling hook, disconnect UPCI cell phone holder connector 1 (universal handy interface) (A34/15x1) and UPCI cell phone holder connector 2 (universal handy interface) (A34/15x2)	i To remove contact plate (22) for UPCI cell phone holder (universal handy interface) (A34/15). ⚠	*140589023300
15	Unclip contact plate (22) for UPCI cell phone holder (universal handy interface) (A34/15) from floor panel (21).		
16	Open stowage compartment (11), unclip cover (23) and unscrew bolts (24).		
17	Expose telephone electric wiring harness at side on hinge (26) and unscrew bolts (25).	i Assemble: Ensure that telephone electric wiring harness is routed correctly at side of hinge (26).	
18	Counterhold stowage compartment (11), pull out hinge (26) to the rear from stowage compartment (11) and remove from (1) center console		
19	Remove bolts (27) and panel (10)	i Assemble: Ensure that electric wiring harness for front central control unit is routed correctly.	
20	Remove front central operating unit from paneling (10).	i See: ↓ Remove/install front central operating unit	AR54.21-P-0500SX
21.1	Remove keyless go center console antenna (A2/60)	On vehicles with code (889) Keyless go	
22	Expose telephone wiring harness at bottom of center console (1).	i To remove stowage compartment (11). Center console (1) removed.	
23	Remove telephone wiring harness from stowage compartment (11).	i Center console (1) removed.	
24	Remove wiring harness for front ashtray housing with cover (2).	i Center console (1) removed.	
25	Assemble in the reverse order		

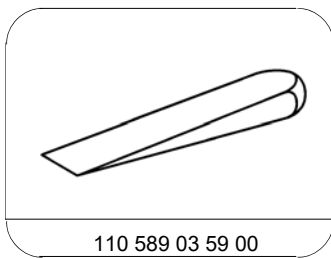

110 589 03 59 00

Mounting wedge

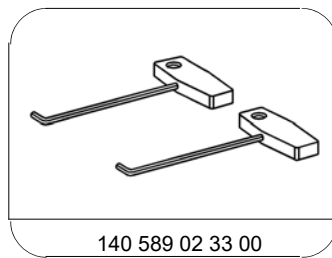

140 589 02 33 00

Pulling hook