







Illustrated on model 221


- 1 Telescopic nozzle
- 2 Flap
- 3 Bolt
- 4  Clamp
- 5 Washer fluid hose
- 6 Pin
- 7 Pin

- E1 Left front lamp unit
- E2 Right front lamp unit

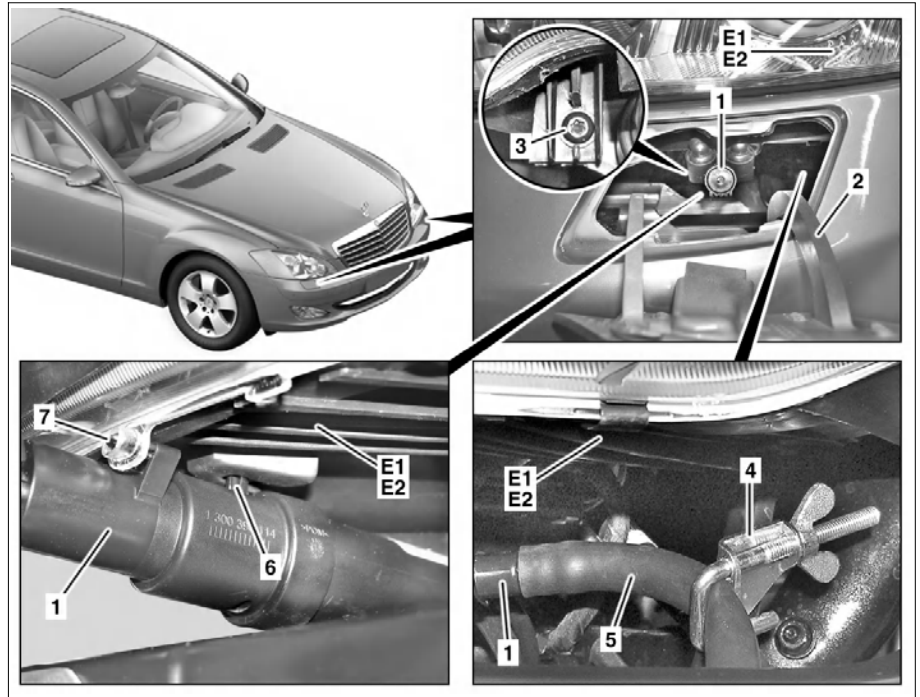

P82.15-2154-06

	Remove/install		
1	Remove front section of fender liner in left or right front fender		
2	Open flap (2) in front bumper and remove bolt (3)	 The screw (3) remains on the left front lamp unit (E1) or right front lamp unit (E2).	
3	Clamp off washer fluid hose (5) with clamping device (4) and detach from telescopic nozzle (1)		<a href="#">*000589403700</a>
4	Remove telescopic nozzle (1)	 <b>Installation:</b> Check that pins (6, 7) on telescopic nozzle (1) are correctly seated in guides on left front lamp unit (E1) or right front lamp unit (E2).	
5	Install in the reverse order		
6	Check adjustment of spray nozzles on headlamp cleaning system, adjust if necessary		

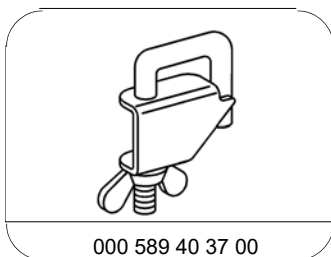

000 589 40 37 00

Clamping device