

MODEL 222.0/1


Modification notes

3.7.13 Remove cover and trailer hitch switch


Operation steps 13 and 14

Shown on vehicles with CODE 282 (Ski bag)

- 1 Trunk floor lining
- 2 Rear center section paneling
- 3 Right paneling
- 4 Left paneling
- 5 Dividing wall paneling
- 6 Through-loading
- 7 Bracket
- 8 Screw
- 9 Expansion rivet

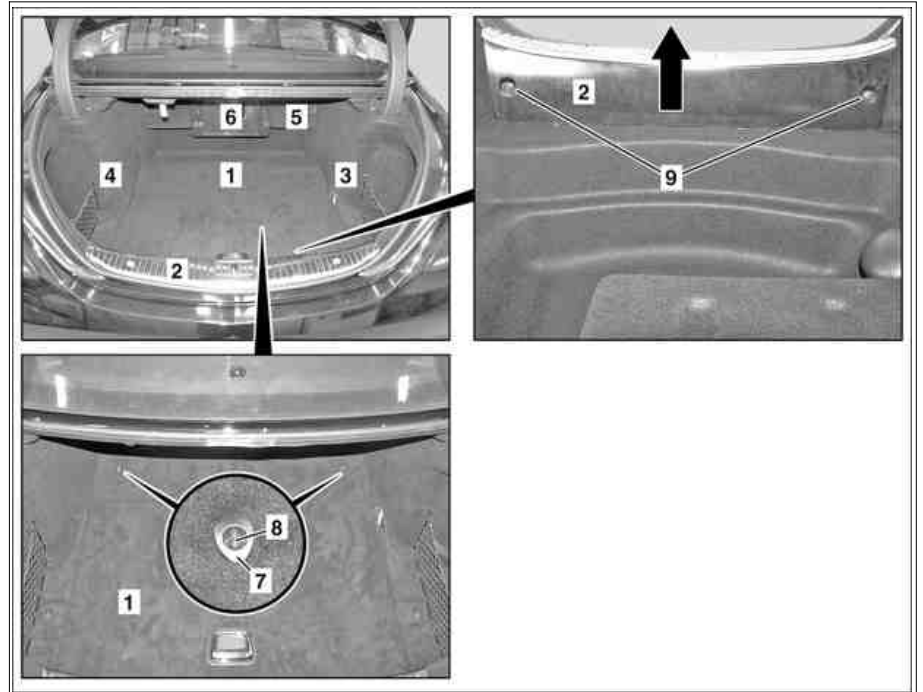

P68.30-3706-06

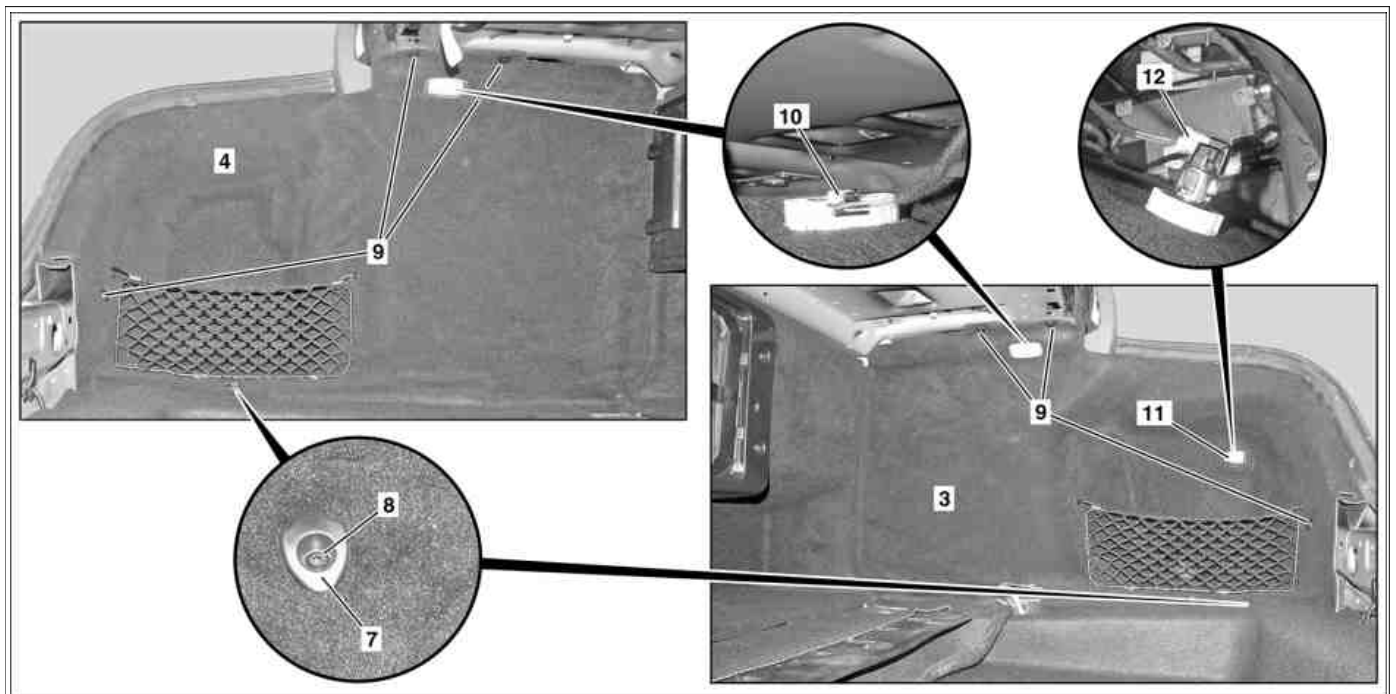


P68.30-3707-09

- 3 Right paneling
- 4 Left paneling
- 7 Bracket
- 8 Screw

- 9 Expansion rivet
- 10 Electrical connector
- 11 12-V socket
- 12 Electrical connector

Shown on vehicles with CODE 282 (Ski bag)

- 5 Dividing wall paneling
- 6 Through-loading
- 13 Screw
- 14 Expansion rivet

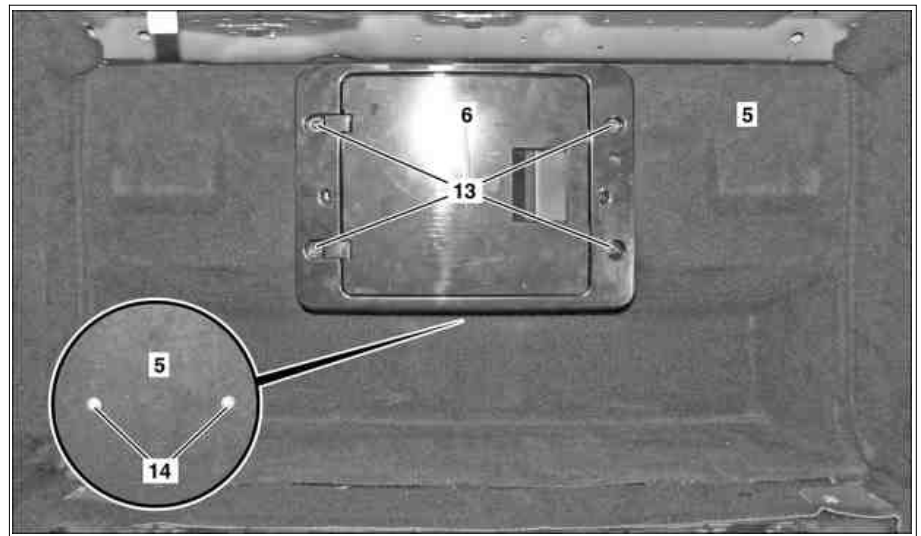

P68.30-3708-05

⚠ Danger !	Risk of injury caused by fingers being jammed or pinched when removing, installing or aligning hoods, doors, trunk lid/rear-end door or sliding roof.	No parts of the body or limbs should be within the operating area when the components are moving.	AS00.00-Z-0011-01A
i	Notes on sensor system for trunk lid opening/closing		AH80.61-P-0001-01A
↔ ↔	Remove/install		
1	Open luggage compartment lid		
2	Remove refrigerator box in trunk	On vehicles with CODE 308 (cooling compartment in center rear backrest)	
3	Remove screw/bolt (8) from bracket (7)		
4.1	Remove trunk floor lining (1)	When removing right paneling (3), left paneling (4). When removing partition wall paneling (5), on vehicles with hybrid drive.	
4.2	Lift trunk floor lining (1)	When removing paneling rear center section (2), slightly lift trunk floor lining (1) and hook into edge guard on trunk cutout.	
5	Remove expansion rivet (9) and unclip paneling rear center section (2) upward		
6.1	Remove expansion rivet (14) from partition wall paneling (5)	On vehicles without CODE 282 (Ski bag) or without CODE 308 (cooling compartment in rear)	
6.2	Unscrew bolts (13) from through-loading facility (6)	On vehicles with CODE 282 (Ski bag) or with CODE 308 (cooling compartment in rear)	
7	Remove through-loading facility (6)	On vehicles with CODE 282 (Ski bag) or with CODE 308 (cooling compartment in rear)	
8	Remove dividing wall paneling (5)		
9	Remove expansion rivet (9) from left paneling (4)	i On vehicles with CODE 811 (Advanced sound system) only two expansion rivets (9) are present.	
10	Detach left paneling (4) and disconnect electrical connector (10)		
11	Remove left paneling (4)		
12	Remove expansion rivet (9) from right paneling (3)		
13	Unclip cover with trailer hitch switch	MODEL 222.0/1 with CODE 550 (Trailer coupling)	
14	Disconnect electrical connectors from trailer hitch switch	MODEL 222.0/1 with CODE 550 (Trailer coupling)	
15	Detach right paneling (3) and disconnect electrical connectors (10, 12)		
16	Remove right paneling (3)		
17	Install in the reverse order		