


Model 217, 222.0/1/9

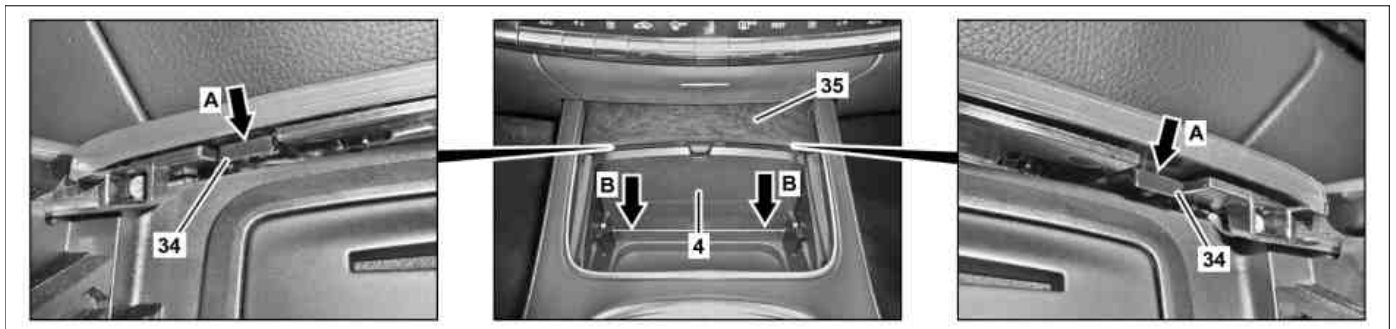

P68.20-4695-07

4 Splash guard cap


34 Retaining tab

35 Trim piece

4 Splash guard cap

35 Trim piece


36 Stowage compartment

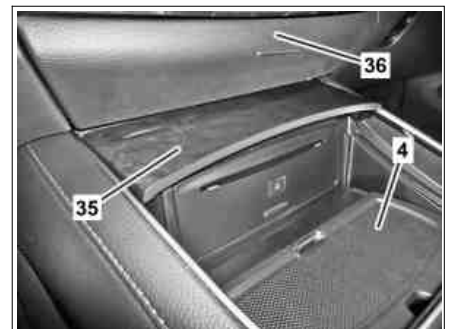


P68.20-4696-01

35 Trim piece

36 Stowage compartment

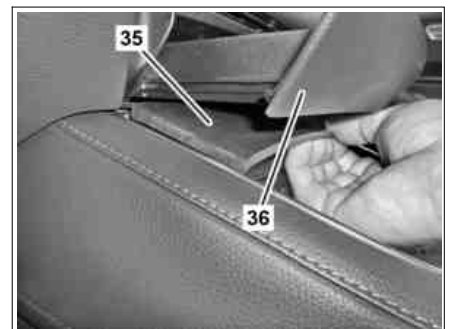







P68.20-4697-01

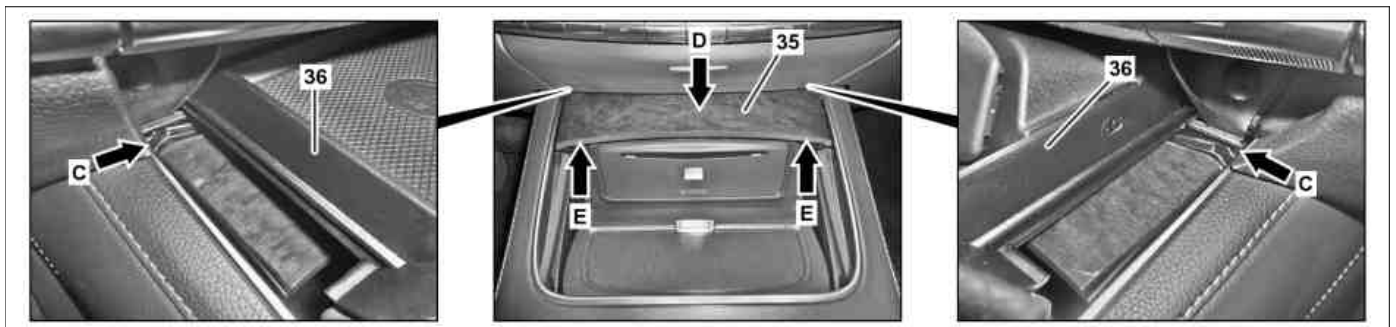

P68.20-4698-07

35 Trim piece

36 Stowage compartment

	Remove		
1	Open front stowage compartment cover		
2	Open splash guard cap (4)		
3	Press retaining tabs (34) downward (arrow direction A) and pull trim piece (35) toward rear (arrow direction B)	 Pull trim piece (35) toward rear only until it is loose.	
4	Open stowage compartment (36) on instrument panel		
5	Lift trim piece (35) and pull out toward rear		
	Install		
6	Open stowage compartment (36) on instrument panel		
7	Lay trim piece (35) down on center console	 The distance between the trim piece (35) and the instrument panel is approx. 4 to 5 mm (arrows C).	
8	Close stowage compartment (36) on instrument panel		
9	Push trim piece (35) toward front (arrows E)	 Simultaneously press trim piece in center (arrow D) downward.	
10	Close front stowage compartment cover		
	Check		
11	Trim piece (35) and stowage compartment cover should run parallel		