


MODELS 221.0 /1

- 1 Seat cover
- 2 Padding
- 3 Stitching wires
- 4 Stapling clip

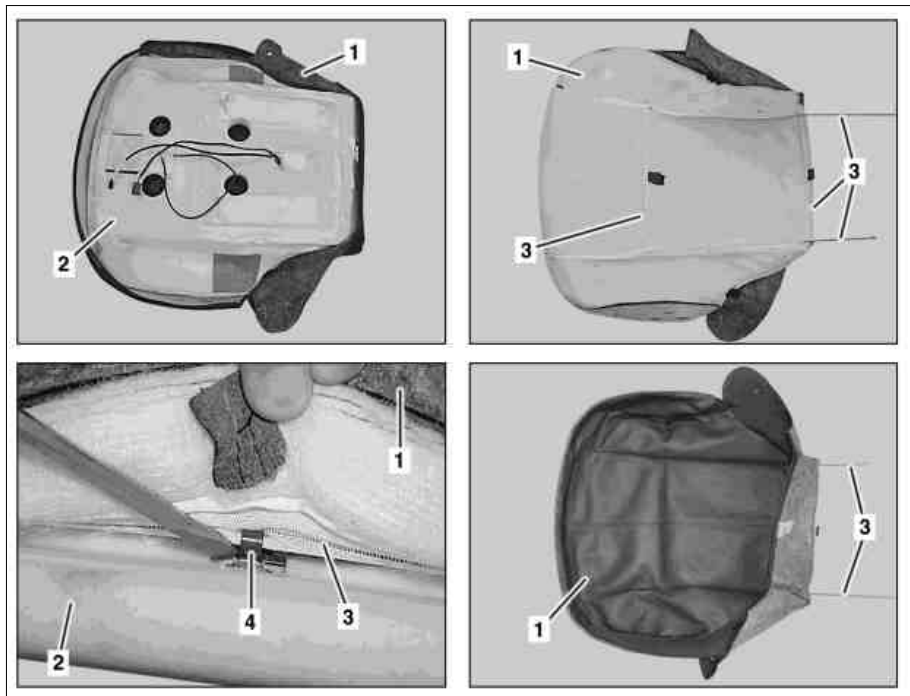

P91.18-2207-06

☒ ☒	Remove/install		
1	Remove seat cushion of left or right front seat		AR91.10-P-3310SX
2	Slip cover (1) over upholstery (2)		
3	Unclip staple wires (3) from staple clips (4)	<div style="border: 1px solid black; padding: 2px;"> <i>i</i> The staple wires (3) are to be fastened to 14 staple clips (4). </div>	
4	Remove cover (1) from upholstery (2)	<div style="border: 1px solid black; padding: 2px;"> <i>i</i> When replacing the cover (1), pull staple wires (3) out of cover (1). </div>	
5	Install in the reverse order		