


P91.10-2954-09

- 6 Stowage compartment
- 7 Catch hook
- 8 Screwdriver

- 9 Front outer trim
- 10 Lug
- 11 Bolt

- 12 Catch hook
- 13 Front inner trim

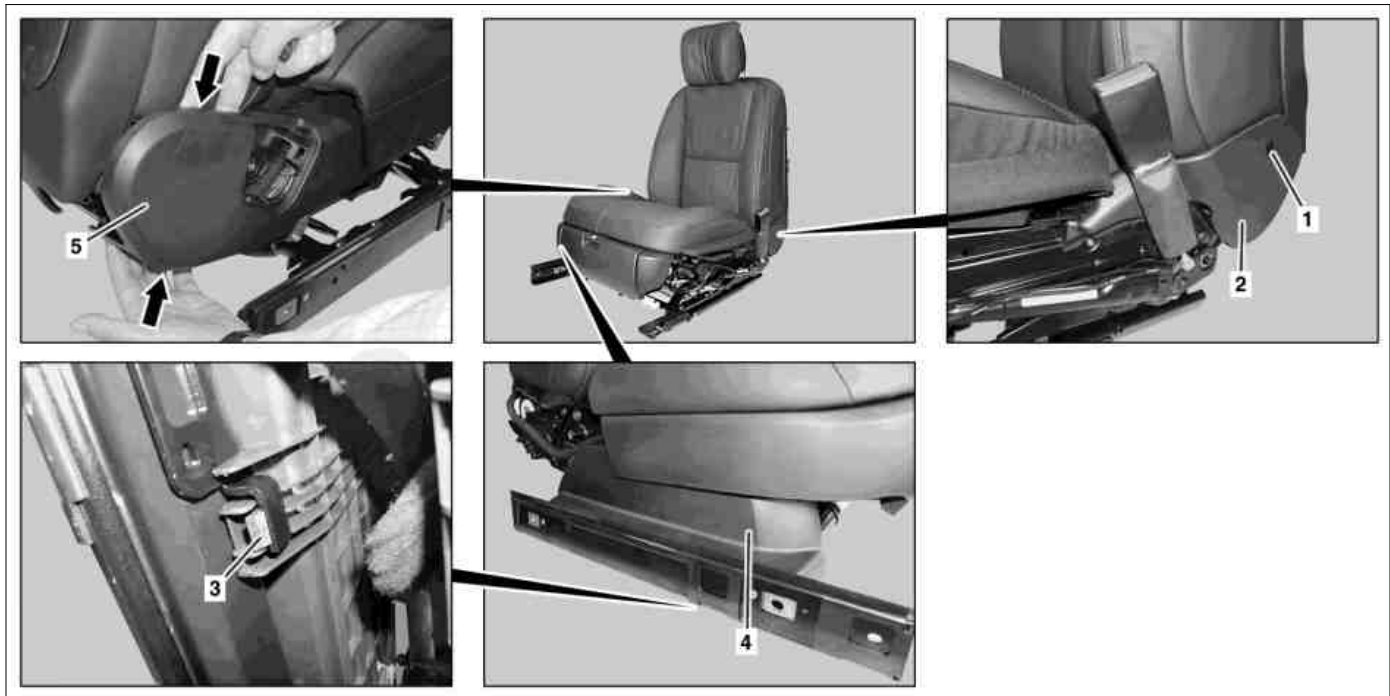

P91.10-2915-09

- 1 Catch hook
- 2 Rear inner trim

- 3 Catch hook
- 4 Bottom outer trim

- 5 Rear outer trim

☒ ☒	Remove/install		
1	Open stowage compartment (6)		
2	Push back catch hooks (7) using suitable screwdriver (8) (arrow A) and detach front outer trim (9) forwards from seat frame	i Installation: Check tab (10) is correctly seated on seat frame mounting.	
3	Unscrew bolt (11)		

4	Push back catch hook (12) using suitable screwdriver (8) (arrow B) and detach front inner trim (13) forwards from seat frame		
5	Remove left or right front seat		AR91.10-P-1000SX
6	Release catch hook (1) and remove rear inner trim (2)		
7	Release catch hook (3) and remove bottom outer trim (4)		
8	Unclip rear outer trim (5) (arrows) and remove		
9	Install in the reverse order		