

Model 217

Model 222


Modification notes

13.07.2016	Open engine hood added
------------	------------------------

Operation step 1

Shown on model 222.182 except code 481 (Underbody protection)


- 1 Center engine compartment paneling
- 2 Front engine compartment paneling
- 3 Bolts
- 4 Bolts
- 5 Bolts
- 6 Rear engine compartment paneling

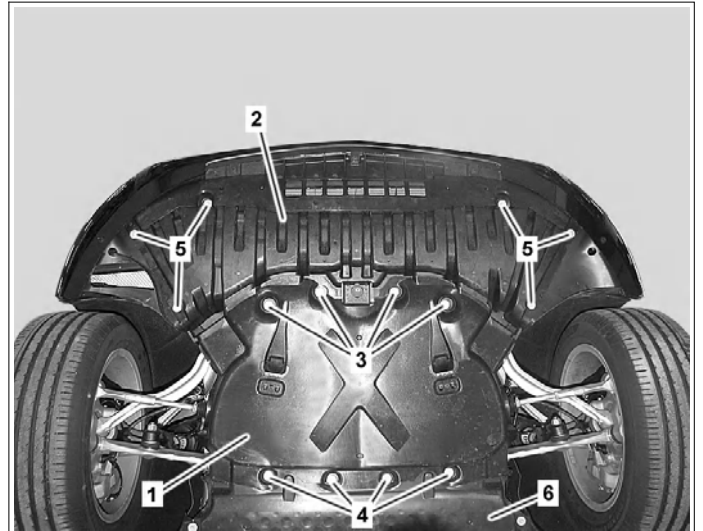

P61.20-2074-11

Shown on model 222.182 except code 481 (Underbody protection)


- 1 Center engine compartment paneling
- 4 Bolts
- 6 Rear engine compartment paneling
- 7 Bolts
- 8 Bolts

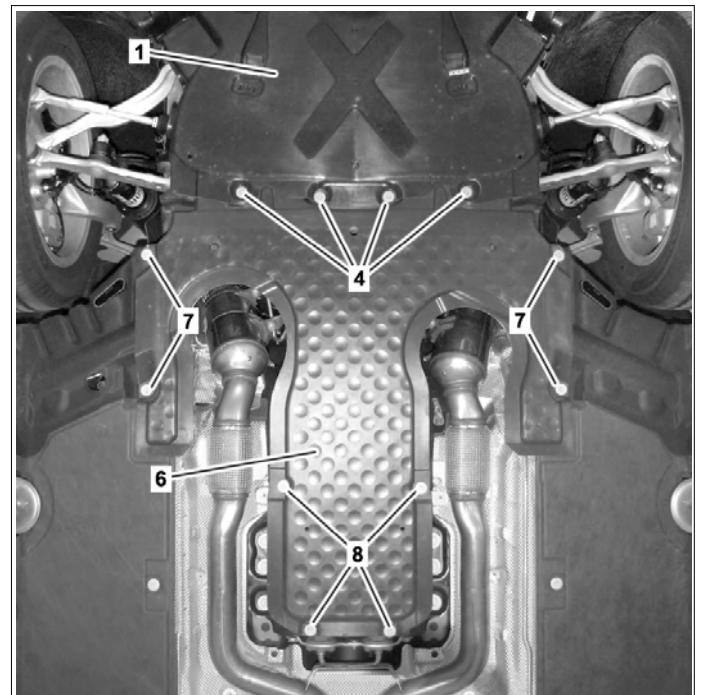

P61.20-2073-12

Shown on model 222.176 with code 481 (Underride guard) and with code Z21 (Fire extinguishing system)

- 2 Front engine compartment paneling
- 3 Bolts
- 4 Bolts
- 5 Bolts
- 6 Rear engine compartment paneling
- 7 Bolts
- 9 Underride guard plate
- 10 Front fire extinguishing system temperature sensor

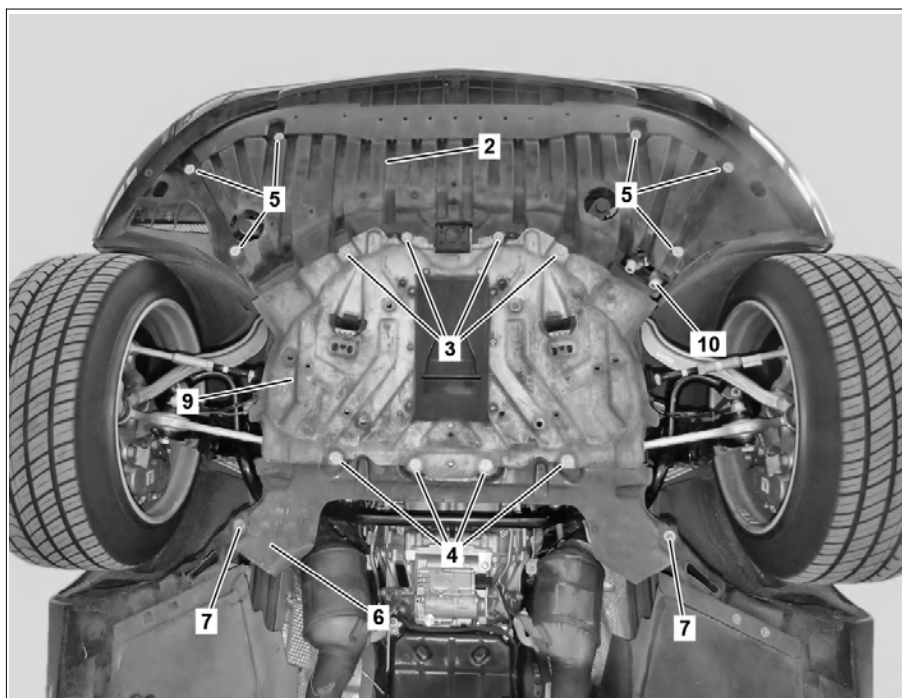

P61.20-2078-06

Danger!	Risk of injury from engine start by remote start function	Prior to starting work, open engine hood, do not reach into rotation range or hazard area of freely rotating parts, wear closed and snug-fitting work clothes	AS00.00-Z-0024-01A
	Remove/install		
1	Open engine hood	Vehicles with remote start function	
2	Raise vehicle		AR00.60-P-1000LF
3.1	Unscrew bolts (3, 4) and remove center engine compartment paneling (1)	Model 217 Model 222 except code 481 (Sump shield)	
3.2	Unscrew bolts (3, 4) and remove underride guard plate (9)	Model 222 with code 481 (Sump shield) Helper required. Screw/bolt, underride guard	*BA61.40-P-1001-01D
4	Remove front fire extinguishing system temperature sensor (10) from front engine compartment paneling (2) and secure on underfloor with wire or cable tie	Model 222 with code Z21 (Fire extinguishing system) When removing front engine compartment paneling (2). Installation: Ensure that the electrical wiring harness is routed without tension to the front fire extinguishing system temperature sensor (10), without pinching or chafing points. Otherwise a malfunction of the fire extinguishing system may occur.	
5	Remove front engine compartment paneling (2) or rear engine compartment paneling (6)		
6	Install in the reverse order		

Underride guard

Number	Designation	Model 222 with code 481 (Sump shield)
BA61.40-P-1001-01D	Screw/bolt, underride guard	Nm 17