


Model 217, 222

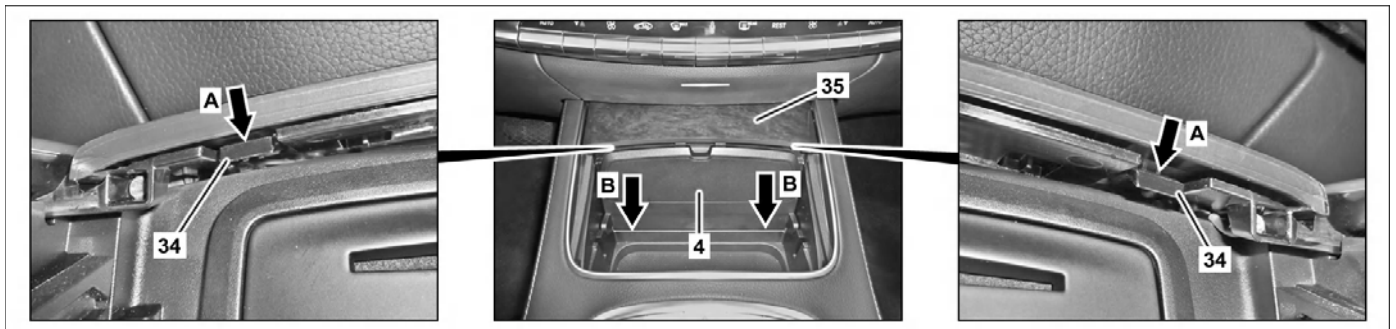

P68.20-4695-07

Shown on model 222 up to model year 2018

4 Splash guard cap

34 Retaining tab


35 Trim piece

Shown on model 222 up to model year 2018

4 Splash guard cap

35 Trim piece

36 Stowage compartment

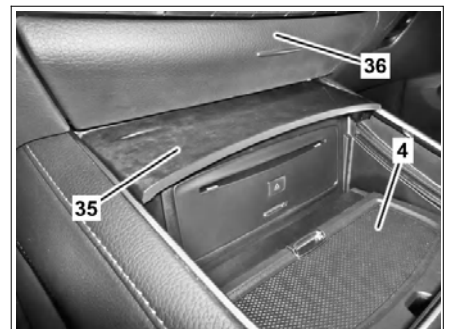


P68.20-4696-01


Shown on model 222 up to model year 2018

35 Trim piece

36 Stowage compartment

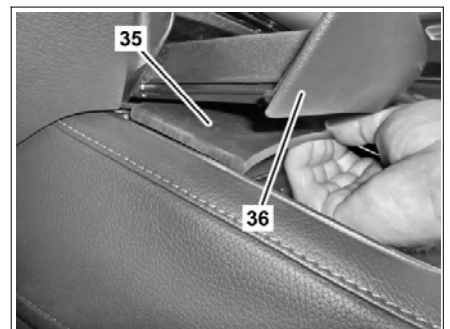

P68.20-4697-01

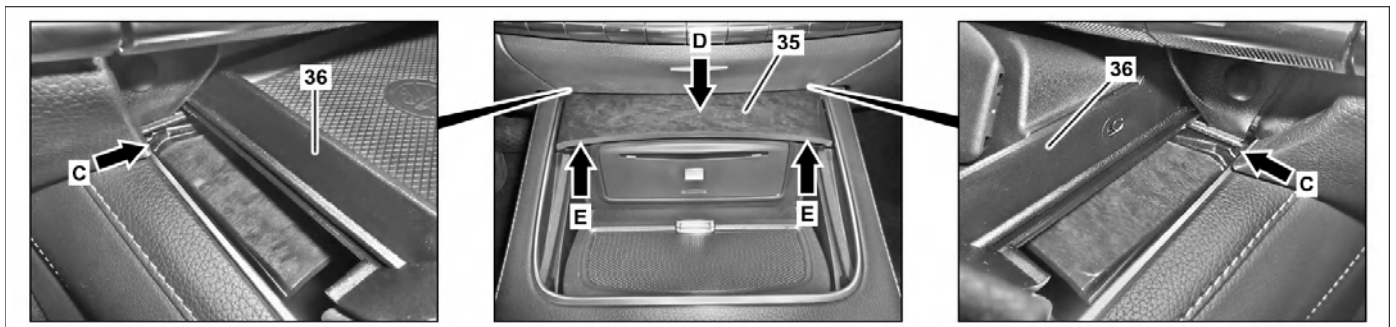







P68.20-4698-07

Shown on model 222 up to model year 2018

35 Trim piece

36 Stowage compartment

	Remove		
1	Open front stowage compartment cover		
2	Open splash guard cap (4)	Model 217, 222 up to model year 2018	
3	Press retaining tabs (34) downward (arrow direction A) and pull trim piece (35) toward rear (arrow direction B)	 Pull trim piece (35) toward rear only until it is loose.	
4	Open stowage compartment (36) on instrument panel		
5	Lift trim piece (35) and pull out toward rear		
	Install		
6	Open stowage compartment (36) on instrument panel		
7	Lay trim piece (35) down on center console	 Trim element (35) has approx. 4 to 5 mm clearance to instrument panel (arrows C).	
8	Close stowage compartment (36) on instrument panel		
9	Push trim piece (35) toward front (arrows E)	 Simultaneously press trim piece in center (arrow D) downward.	
10	Close front stowage compartment cover		
	Check		
11	Trim element (35) and stowage compartment cover must run in parallel		