


Model 217

Model 222

Modification notes

28.03.2013	Schraube Knie-Airbag an Abdeckung Fußraum	BA91.60-P-1003-01I
------------	---	--------------------

- 1 Driver kneebag
2 Bolts

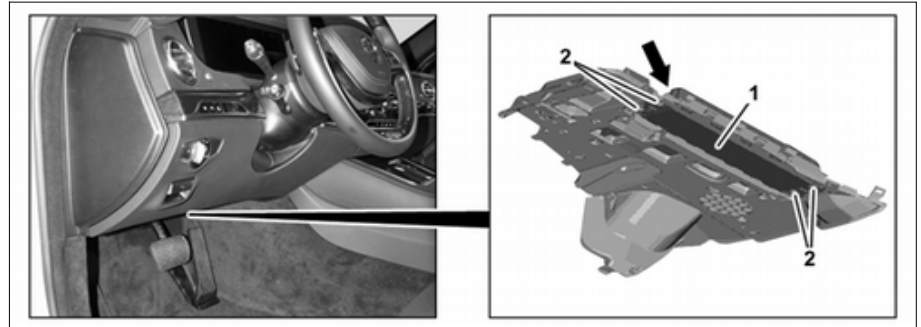


P91.60-4634-04

	Warning	Risk of injury during testing and repair operations related to pyrotechnical components	Do not expose pyrotechnical component parts to temperatures above 100 °C or 212 °F. Disconnect current supply when working on such component parts.	AS91.00-Z-0008-01A
		Information on preventing damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
		Information, assessment and legal requirements when working with, handling and storing pyrotechnical components		AH91.00-Z-0000-10A
		Remove/install		
1		Adjust driver seat backwards and steering column upwards		
2		Switch on ignition and store transmitter key outside of transmission range (min. 2 m)		
3		Disconnect battery ground line		AR54.10-P-0003LF
4		Remove screw/bolts (2)	Bolt, knee airbag to footwell cover	*BA91.60-P-1003-01I
5		Remove driver kneebag (1), until the electrical connector (arrow) of the driver kneebag squib is accessible		
6		Release and disconnect electrical connector (arrow) from driver kneebag squib	Removal lever	*203589043300
7		Remove driver kneebag (1)		
8		Install in the reverse order		
		Check		
9		Check and erase vehicle fault memory using the diagnostic system	When replacing the driver kneebag (1).	AD00.00-P-2000-04B

Airbag

Number	Designation		Model 217	Model 222
BA91.60-P-1003-01I	Bolt, knee airbag to footwell cover	Nm	5	5

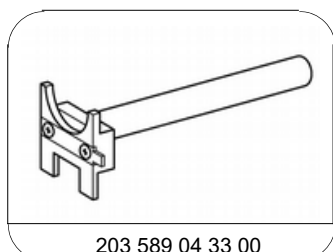

Removal lever