


Model 217.3, 222.0/1/9

Shown on model 222


- 1 Cover
- 2 A-pillar trim panel
- 3 Edge guard
- 4 Instrument panel

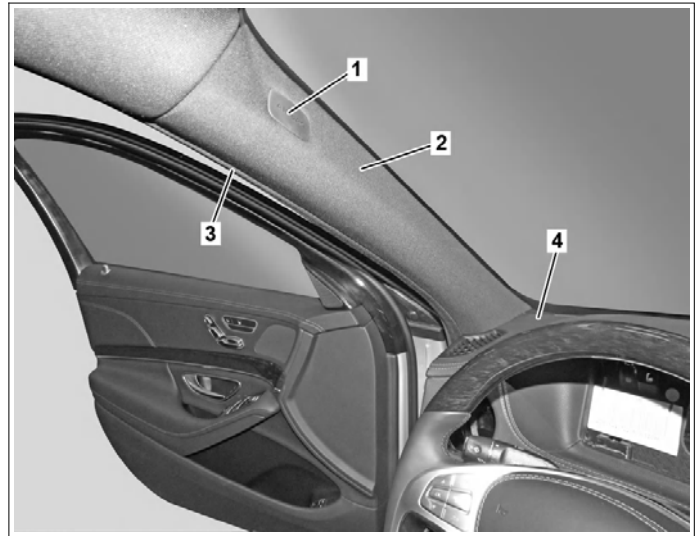

P68.30-3683-11

Shown on model 222

- 2 A-pillar trim panel
- 3 Edge guard
- 4 Instrument panel
- 5 Nut
- 6 Guides

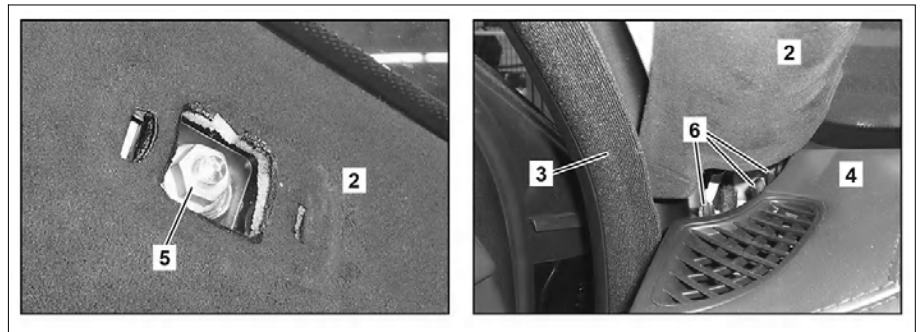


P68.30-3719-04

	Note on functional reliability of windowbag		AH91.60-P-0693-01A
	Remove		
1	Unclip cover (1)	Clip remover	*452589016300
2	Unscrew nut (5)		
3	Guide A-pillar paneling (2) upward out of instrument panel (4)		
	Install		
4	Guide A-pillar paneling (2) at bottom behind edge guard (3) and move between instrument panel (4) and guides (6)		
5	Guide A-pillar paneling (2) from bottom upward into edge guard (3)		
6	Screw on nut (5)	Nut, trim bracket to A-pillar	*BA68.30-P-1003-01E
7	Clip in cover (1)		

Paneling, trim piece

Number	Designation		Model 217	Model 222
BA68.30-P-1003-01E	Nut, trim bracket to A-pillar	Nm	5	5

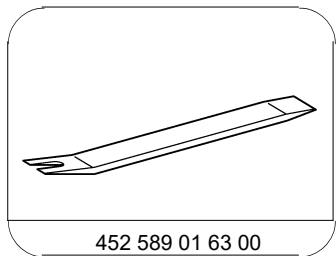

452 589 01 63 00

Clip remover