



MODEL 222

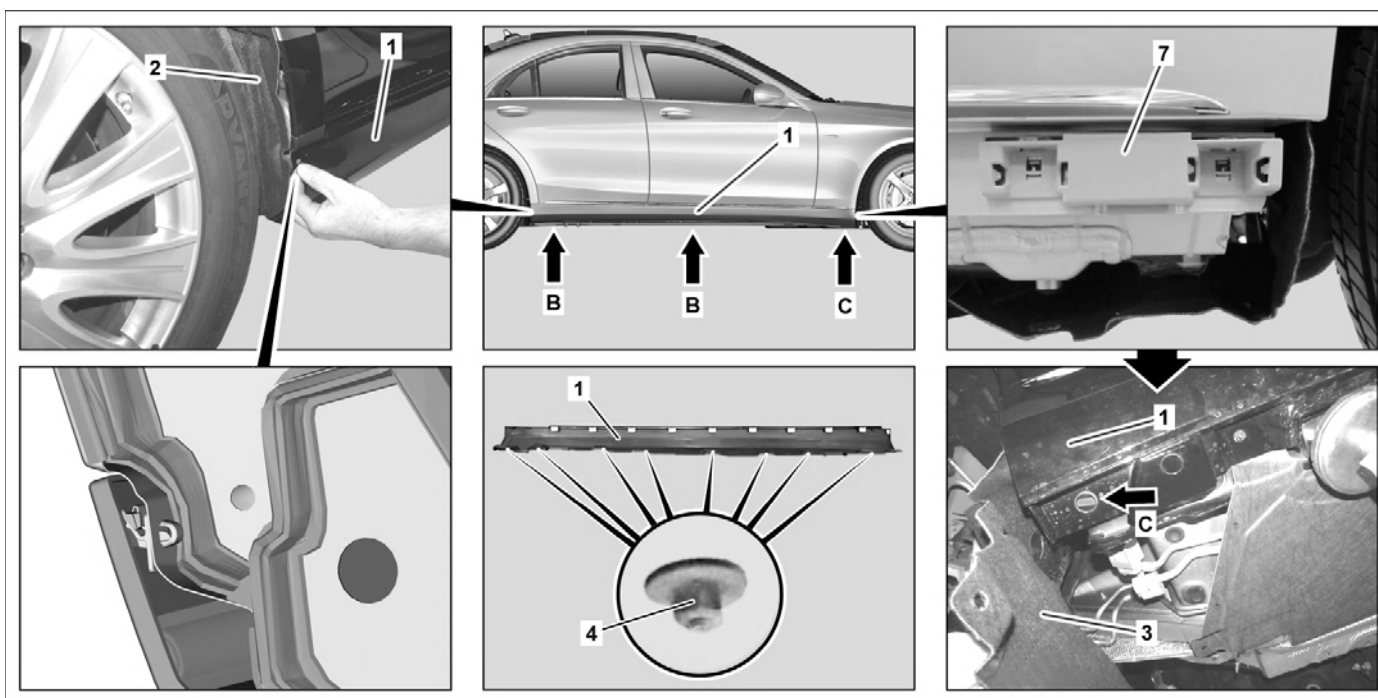

P88.80-2253-09

Shown on model 222.1

- 1 Longitudinal member paneling
- 2 Rear fender liner
- 3 Front fender liner
- 4 Nut
- 5 Retaining clip
- 7 Retaining clip

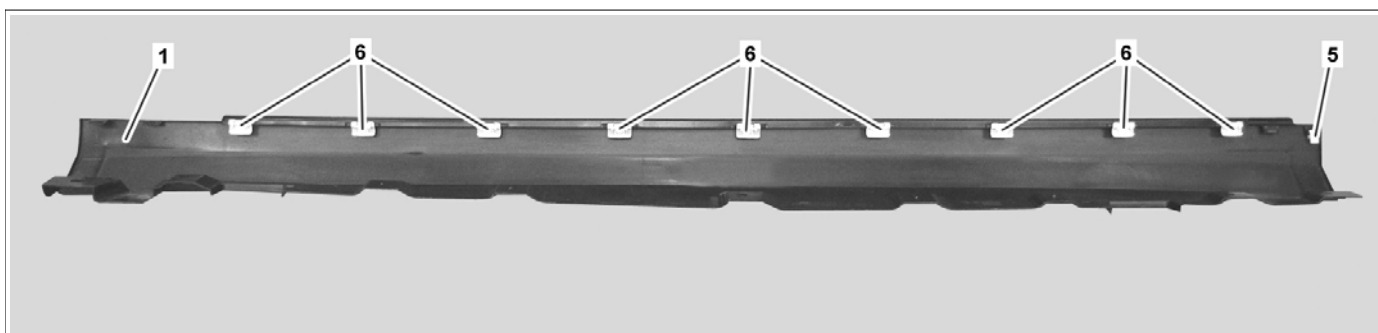


P88.80-2226-07

Shown on removed longitudinal member paneling (1) on MODEL 222.1

- 1 Longitudinal member paneling
- 5 Retaining clip
- 6 Retaining clip

☒ ☒	Remove/install		
1	Detach underfloor paneling until longitudinal member paneling (1) can be removed		AR61.30-P-1001LF
2	Press front fender liner (3) to side until retaining clip (arrow C) is accessible		
3	Turn retaining clip (arrows B and C) 90 ° and remove		
4	Unscrew nuts (4) at bottom from longitudinal member paneling (1)	MODEL 222 with CODE Z07 (Top protection)	
5	Detach rear fender liner (2) until retaining clip (5) is accessible	<input checked="" type="checkbox"/> Mounting wedge	*110589035900

6	Unclip retaining clip (5)		
7	Unclip longitudinal member paneling (1) starting at rear horizontally from longitudinal member and remove	<b>i</b> Doors remain closed.	
8	Remove retaining clips (5, 6 and 7) remaining on vehicle and install at longitudinal member paneling (1)	<b>i</b> Replace damaged retaining clips (5, 6 and 7).	
9	Install in the reverse order		

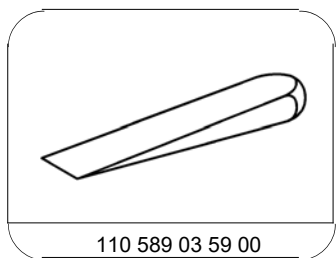

110 589 03 59 00

Mounting wedge