


AZ88.00-P-0001-040	Converting side paneling	Model 230	
--------------------	--------------------------	-----------	--

Preparation

1 Remove side paneling.

**Assembling**

2 Reinstall AMG side paneling in opposite order.

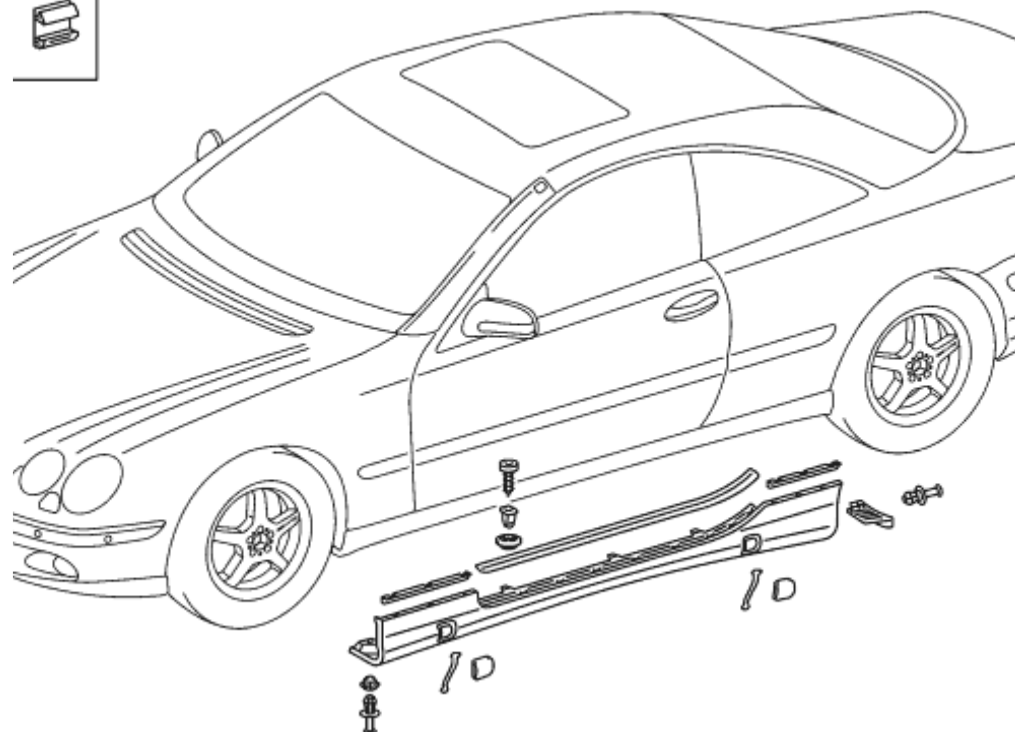

P88.00-2160-06