



- 1 Drill 6 mm dia. hole at marked point (see arrow) through bead on frame floor system (FFS) and treat with corrosion protection agent.

**i** Do not damage carpeting in vehicle.

- 2 Secure connection cable for the lamp foil to the underside of the illuminated door sill molding (1) with adhesive tape (2) (see figure on left).

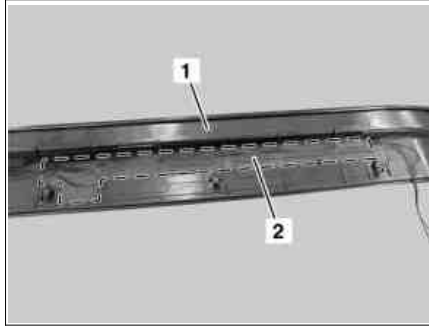

P82.20-2317-01

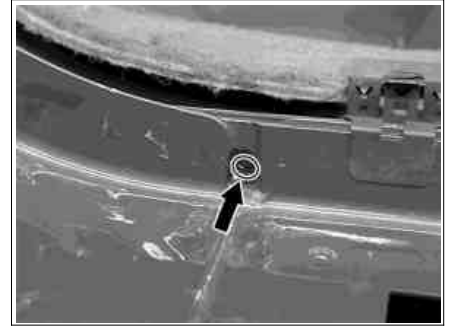


P82.20-2315-01

- 3 Open connector housing (5) at connection wire of illuminated door sill molding and pull out wires.
- 4 Route connection lead for illuminated door sill molding (1) to passenger compartment through bore hole (see arrow) and insert into connector housing (5).

**i** Use clamps as required.

- 5 Clip in illuminated door sill molding (1).

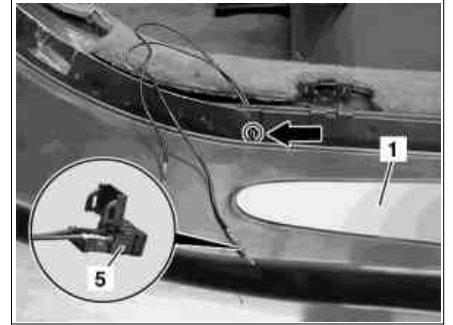

P82.20-2316-01