


MODEL 230.4 except CODE (P99) "AMG Black Series" special model

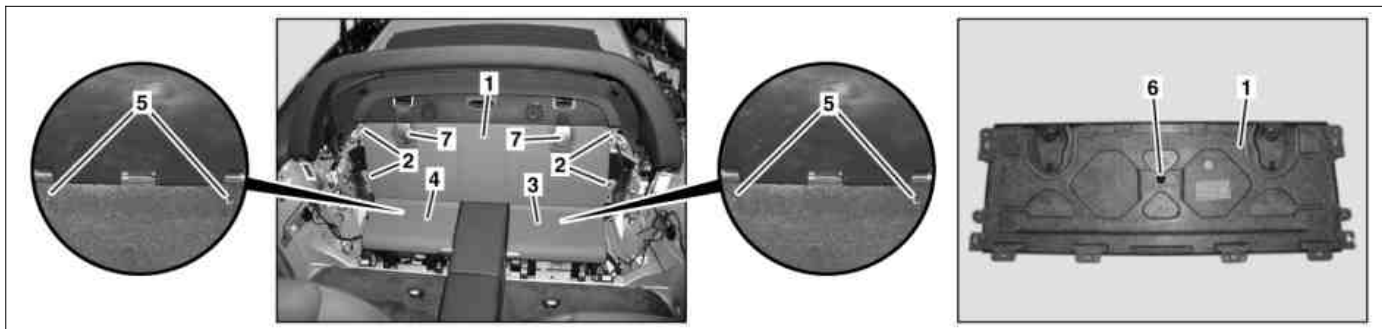

P68.30-3117-07

- 1 Rear wall paneling
- 2 Bolts
- 3 Left stowage box

- 4 Right stowage box
- 5 Bolts

- 6 Clip
- 7 Luggage belt

☒ ☒	Remove/install		
1	Remove left and right rear side paneling		AR68.30-P-4780R
2	Unscrew bolts (2) from rear wall paneling (1)		
3	Open left stowage box (3) and right stowage box (4)		
4	Unscrew bolts (5) in left stowage box (3) and right stowage box (4)		
5	Unhook luggage belts (7) from rear wall paneling (1).		
6	Unclip rear wall paneling (1) from clip (6) and remove from vehicle	i Installation: Replace damaged clip (6).	
7	Install in the reverse order		