


P68.20-2933-07

- 1 Stowage box
- 2 Cover
- 3 Cover

- 10 Bolts
- 11 Retaining clamp

- 12 Guides
- 13 Insert mat

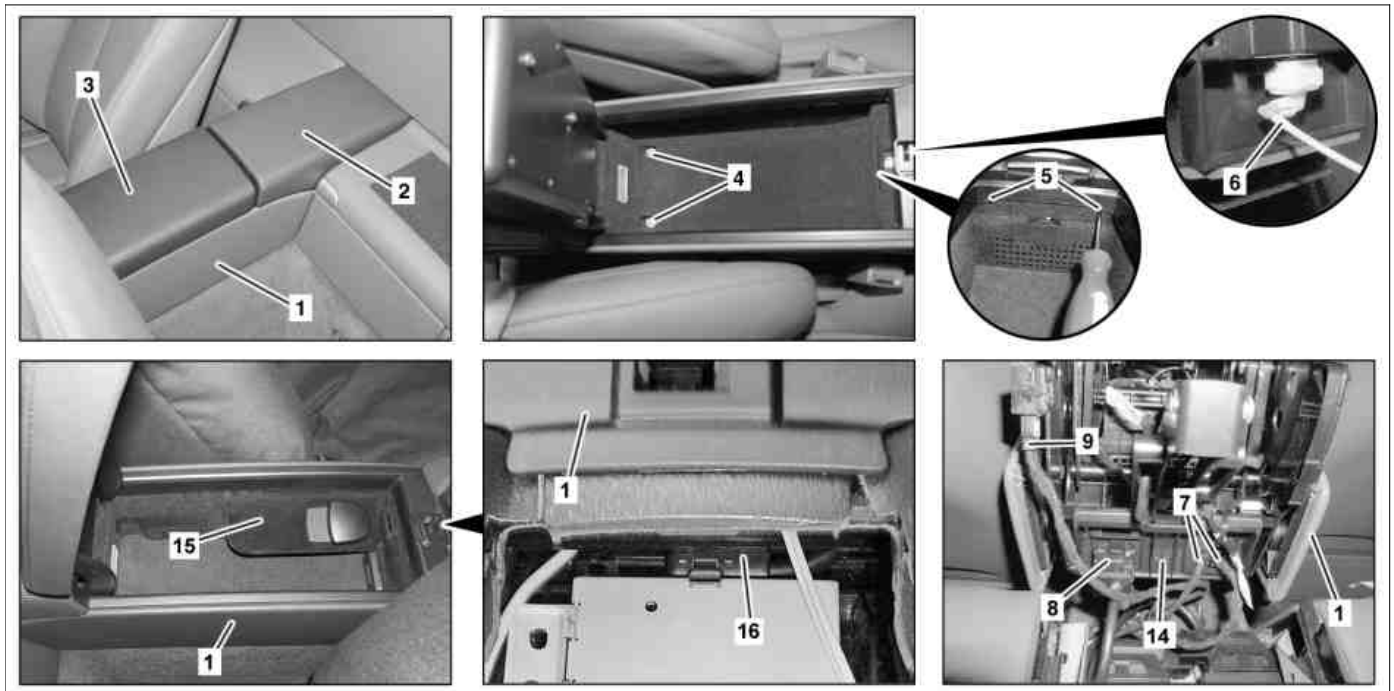

P68.20-3853-09

**Shown as of 28.1.08 and with code (809)  
Model year 2009**

- 1 Stowage box
- 2 Cover
- 3 Cover
- 4 Nuts
- 5 Bolts
- 6 Central locking pneumatic line

- 7 Electrical connectors
- 8 Connector
- 9 Electrical connector (with code (882)  
Interior monitoring (only with ATA)
- 14 Mount

- 15 Telephone holder (as of 28.1.08 or  
with code (809) Model year 2009 and  
with code (386) Preinstallation for cell  
phone, UPCI system)
- 16 Electrical connector (with code (518)  
Media Interface)

☒ ☒	Remove/install		
1	Unclip telephone holder (15) and lay down to side in stowage box with electrical lines connected	On vehicles as of 28.1.08 or with code (809) Model year 2009 and with code (386) Preinstallation for cell phone, UPCI system	
2	Remove insert mat (13) from stowage box (1)		
3	Unscrew bolts (5, 10)	<b>i</b> Bolts (5) are located behind access openings in stowage box (1).	
4	Unscrew nuts (4)		
5	Close cover (3)		
6	Remove cover (2)	<b>i</b> <b>Installation:</b> Ensure that retaining clips (11) are seated properly in guides (12).	
7	Open lid (3)		
8	Lift front stowage box (1) and remove central locking pneumatic line (6)		

9	Lift front stowage box (1) and disconnect electrical connector (16)	On vehicles with code (518) Media Interface	
10	Lift stowage box (1) at rear until electrical connectors (7) are accessible		
11	Disconnect electrical connectors (7)	<b>i</b> Number of electrical connectors (7) depends on equipment.	
12	Disconnect electrical connector (9)	On vehicles with code (882) Interior monitoring (with ATA only)	
13	Unclip connector (8) from mount (14).		
14	Remove stowage compartment (1)		
15	Install in the reverse order		