


MODEL 230.4

- 1 Glove compartment lid
- 2 Instrument panel
- 3 Paneling
- 4 Cover
- 5 Bolts
- 6 Lock
- 7 Stop buffer

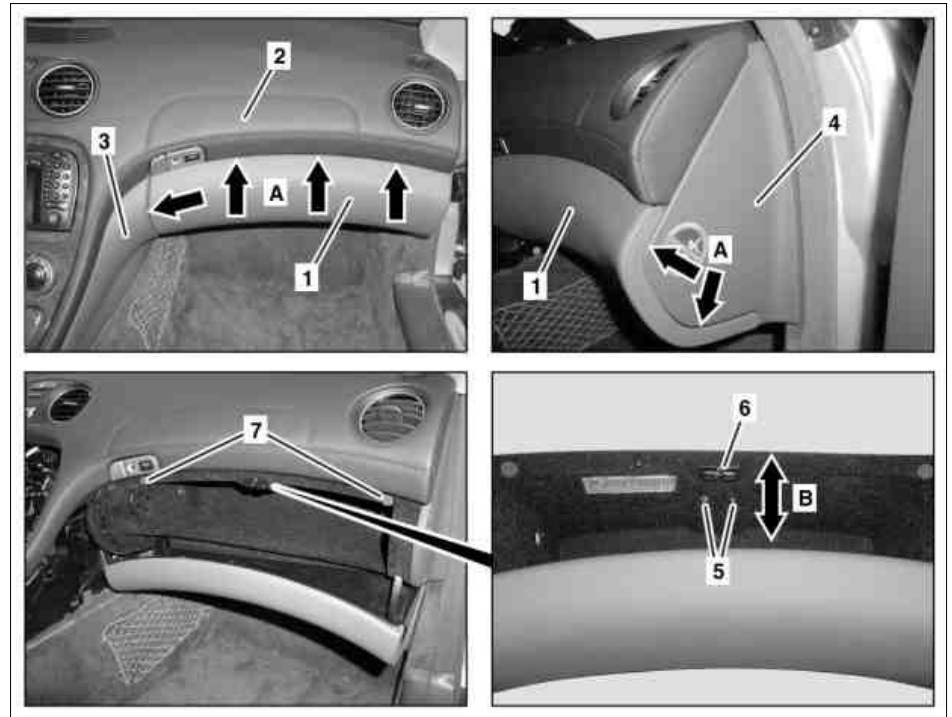

P68.10-2576-06

	Adjust		
1	Open glove compartment lid (1) and screw in stop buffer (7).		
2	Loosen bolts (5)		
3	Adjust uniform gap width (arrows A) in transition area to instrument panel (2), paneling (3) and cover (4) by moving lock (6) in direction of arrow (arrow B).		
4	Tighten screws (5)		
5	Unscrew both stop buffers (7) until the closed glove compartment lid (1) makes contact.		
6	Check glove compartment lid (1) for ease of movement and proper function, and repeat adjustment procedure if necessary		