


MODEL 230.4

Shown on model 230.4 without code (P99)
Special model "AMG Black Series"

- 1 Cover
2 Bolts

E17/15 Right footwell lamp

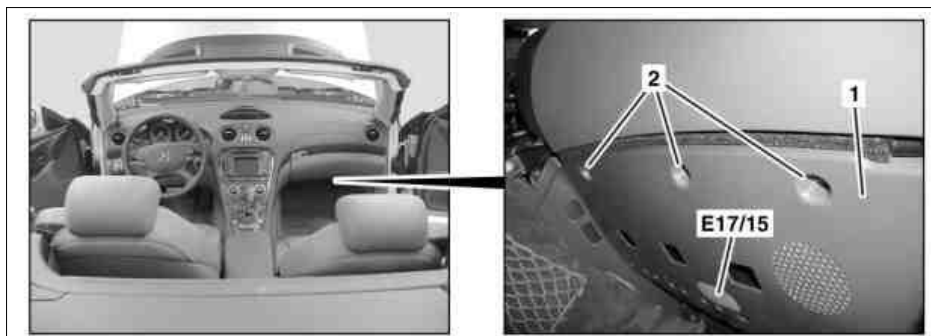

P68.10-2570-04

☒ ☒	Remove/install		
1	Remove bolts (2)		
2	Pull out cover (1) toward rear until electrical connector on right footwell lamp (E17/15) is accessible.		
3	Disconnect electrical connector from right footwell lamp (E17/15) and remove cover (1).		
4	Install in the reverse order		