


AR68.30-P-4750R

Remove/install rear wall paneling

20.12.05

MODEL 230.4

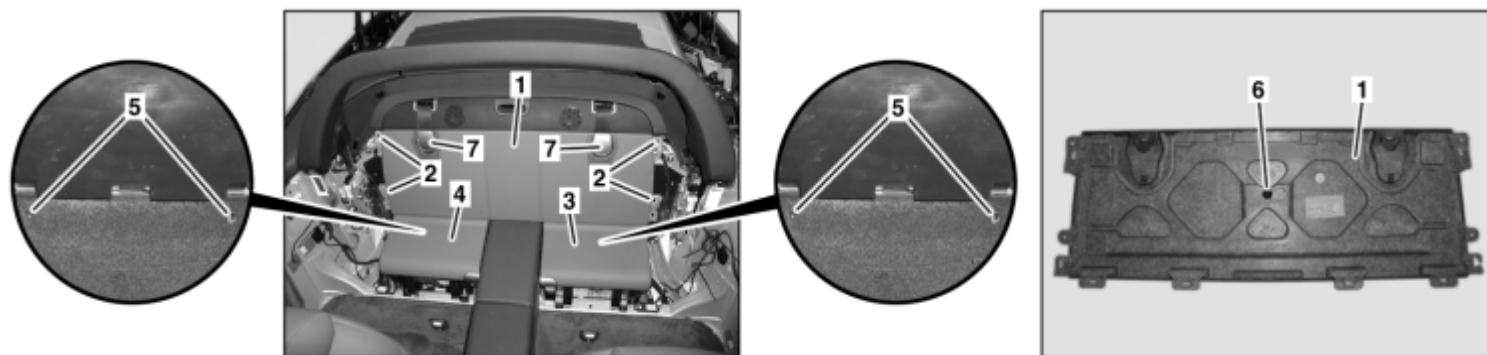



P68.30-3117-07

1 Rear wall paneling
2 Bolts
3 Left stowage box

4 Right stowage box
5 Bolts

6 Clip
7 Luggage belt

	Remove/install		
1	Remove left and right rear side paneling		AR68.30-P-4780R
2	Unscrew bolts (2) from rear wall paneling (1)		
3	Open left stowage box (3) and right stowage box (4)		
4	Unscrew bolts (5) in left stowage box (3) and right stowage box (4).		
5	Unhook luggage belts (7) from rear wall paneling (1).		
6	Unclip rear wall paneling (1) from clip (6) and remove from vehicle.	 Installation: Replace damaged clip (6).	
7	Install in the reverse order		