




AR68.30-P-4780R	Remove/install side paneling in rear	20.12.05
-----------------	--------------------------------------	----------



MODEL 230.4

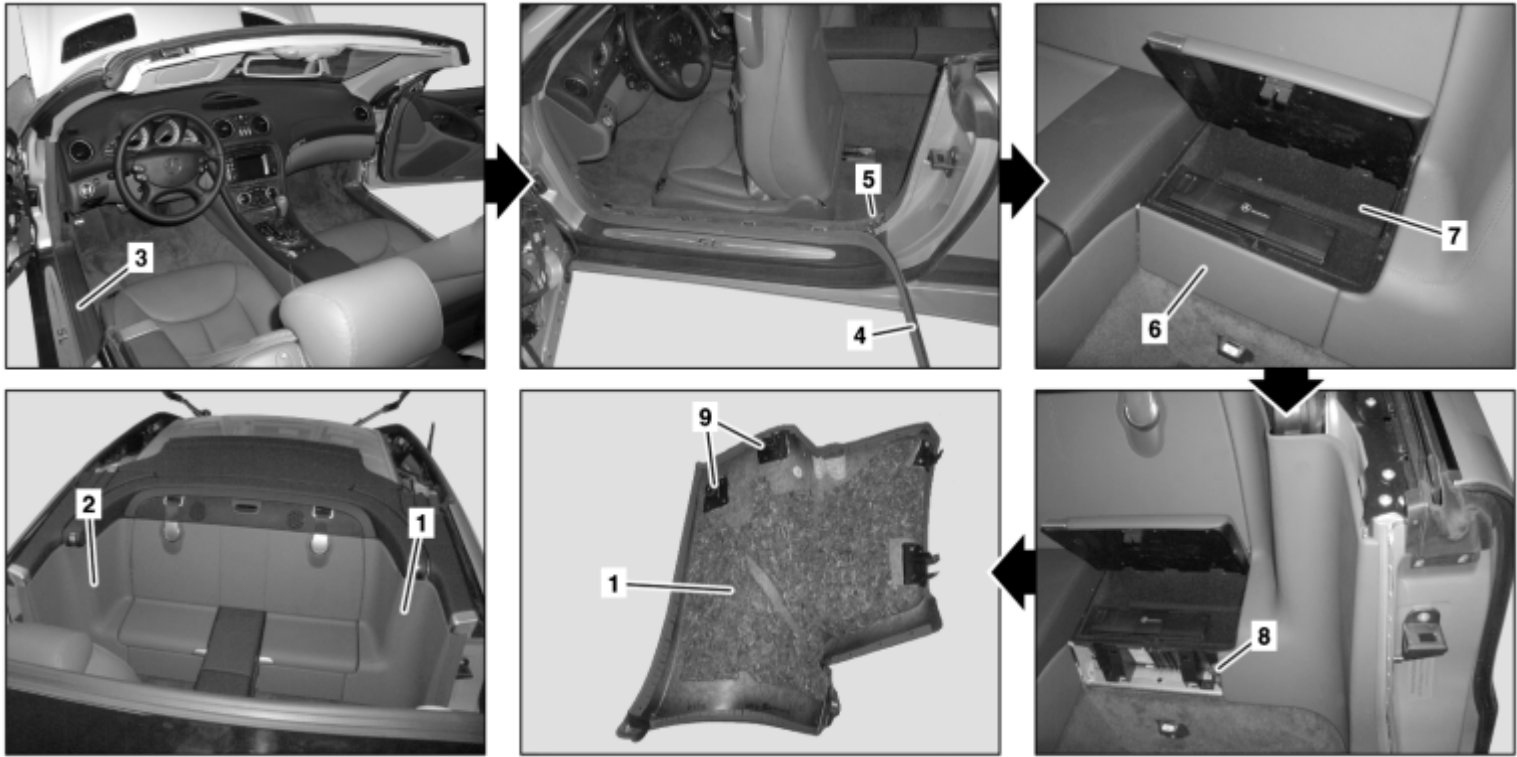

P68.30-2373-09

- 1 Left rear side wall paneling
- 2 Right rear side wall paneling
- 3 Cover
- 4 Edge guard
- 5 Mounting clamp
- 6 Paneling on stowage box
- 7 Stowage box
- 8 Bolt
- 9 Clip

 	Remove/install		
1	Completely open Vario roof		
2	Remove draft stop		

3	Move driver and front passenger seat toward front to end position		
4	Unclip cover (3) from door sill molding with mounting wedge and remove		<a href="#">110 589 03 59 00</a>
5	Remove edge guard (4) in area of B-pillar.		
6	Pull mounting clamp (5) off B-pillar		
7	Open stowage box (7)		
8	Unclip paneling from stowage box (6) and remove		
9	Unscrew bolt (8)		
10	Unclip left rear side wall paneling (1) and right rear side wall paneling (1) from clips (9) with mounting wedge and remove.		<a href="#">110 589 03 59 00</a>
11	Install in the reverse order		



110 589 03 59 00

Mounting wedge