


## MODEL 230.4 except CODE (P99) "AMG Black Series" special model

Shown on vehicle up to 28.1.08 without code (809) Model year 2009

- 1 Telescopic nozzle
- 2 Retaining clamp
- 3 Washer fluid hose
- 4 Bolt (up to 28.1.08 without code (809) Model year 2009)
- 5 Bolt (up to 28.1.08 without code (809) Model year 2009)
- 6 Bracket (up to 28.1.08 without code (809) Model year 2009)
- 7 Screw

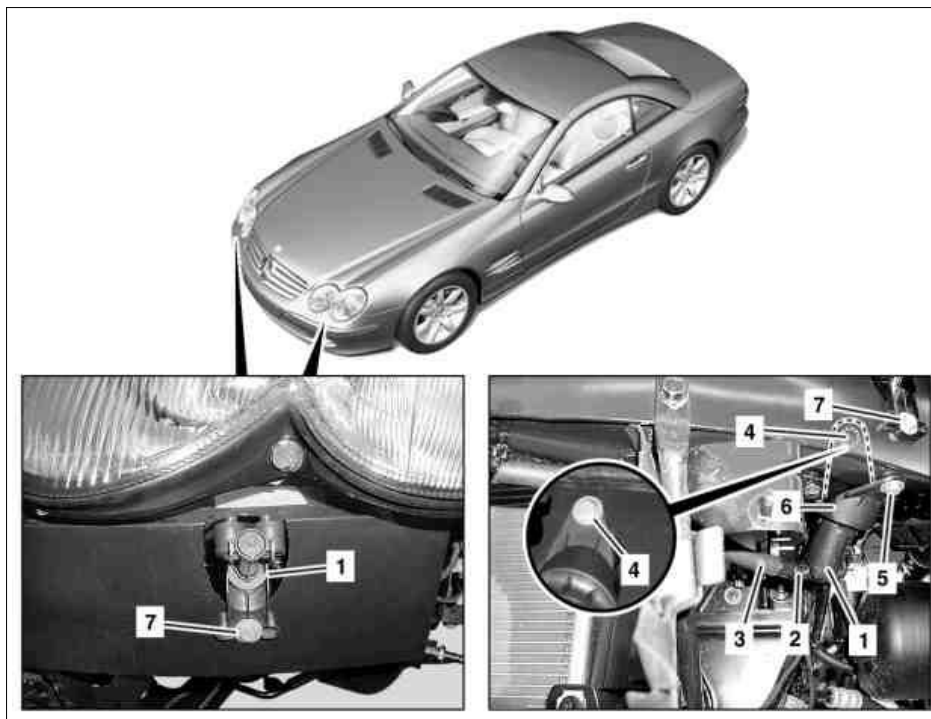

P82.15-2086-06

☒ ☒	Remove/install		
1	Detach left or right front engine compartment paneling	When removing the left or right telescopic nozzle (1) individually. <b>i</b> Do not remove front engine compartment paneling from front section of fender liner. Both components are removed together later.	AR61.20-P-1105R
2	Remove front section of fender liner in left or right front fender and remove together with previously detached front engine compartment paneling	When removing the left or right telescopic nozzle (1) individually.	AR88.10-P-1300R
3.1	Detach front bumper	When removing the left or right telescopic nozzle (1) individually.	AR88.20-P-2000-01R
3.2	Remove front bumper	When removing both telescopic nozzles (1) at the same time.	AR88.20-P-2000R
4	Detach retaining clamp (2) and remove washer fluid hose (3) from telescopic nozzle (1)	<b>i</b> Collect washer fluid which flows out.	
5	Undo screws (4, 5) from bracket (6) of telescopic nozzle (1)	Vehicles up to 28.1.08 without code (809) Model year 2009	
6	Remove bracket (6)	Vehicles up to 28.1.08 without code (809) Model year 2009	
7	Unscrew bolt (7)		
8	Remove telescopic nozzle (1) from above		
9	Install in the reverse order		
10	Fill washer fluid reservoir		AP82.35-P-8210N