


MODEL 230.4 except CODE (P99) "AMG Black Series" special model

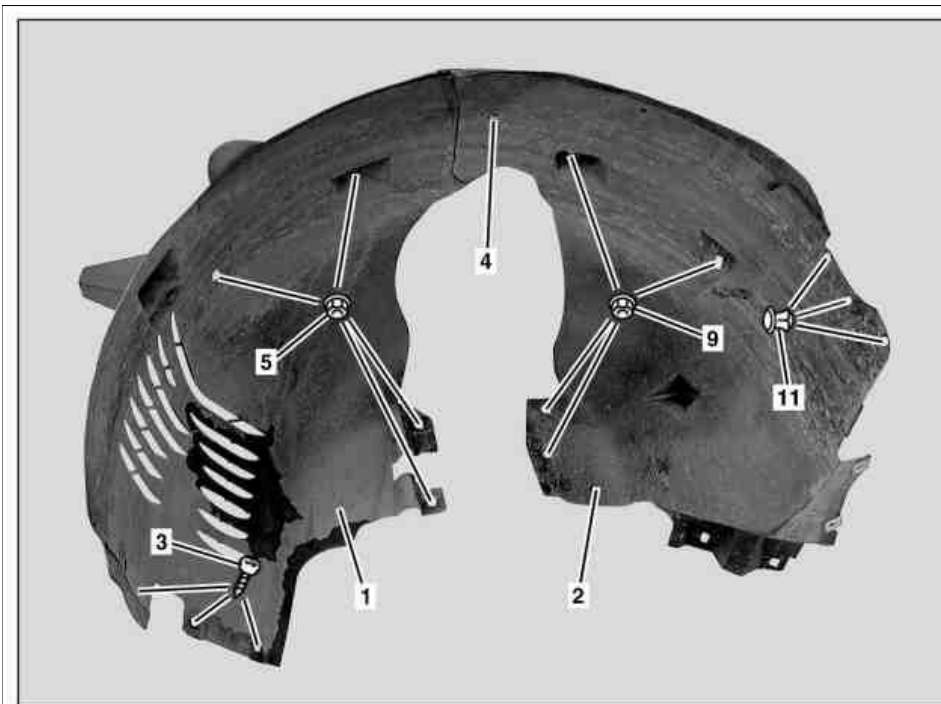


P88.10-2136-09

Shown on vehicle up to 28.2.06, left fender liner

- |   |                             |   |                                  |    |                |
|---|-----------------------------|---|----------------------------------|----|----------------|
| 1 | Front section, inner fender | 5 | Nuts                             | 9  | Nuts           |
| 2 | Rear section, inner fender  | 6 | Bolts                            | 10 | Bolts          |
| 3 | Bolts                       | 7 | Rear engine compartment paneling | 11 | Expansion clip |
| 4 | Screw                       | 8 | Nuts                             |    |                |

☒ ☒	Remove/install		
⚠ <b>Danger!</b>	<b>Risk of death</b> caused by vehicle slipping or toppling off of the lifting platform.	Align vehicle between columns of vehicle lift and position four support plates at vehicle lift support points specified by vehicle manufacturer.	AS00.00-Z-0010-01A
1	Raise vehicle with vehicle lift	☒	*230589003100
<b>Remove fender liner front section (1)</b>			
2	Unscrew bolts (3) and bolt (4)		
3	Unscrew nuts (5).		
4	Remove fender liner front section (1)	<b>i</b> <b>Installation:</b> Ensure that front section of fender liner (1), and rubber seal are seated properly.	
<b>Fender liner rear section (2)</b>			
5	Remove front wheel		AP40.10-P-4050Z
6	Unscrew bolts (6) from rear engine compartment paneling (7)		
7	Pull down rear engine compartment paneling (7) until nuts (8) are accessible and unscrew nuts (8)		
8	Unscrew nuts (9)		
9	Unscrew bolts (10) and bolt (4)		
10	Remove expansion clips (11) from longitudinal member paneling		
11	Remove fender liner rear section (2)	<b>i</b> <b>Installation:</b> Ensure that fender liner rear section (2) and rubber seal are seated properly.	
12	Install in the reverse order		

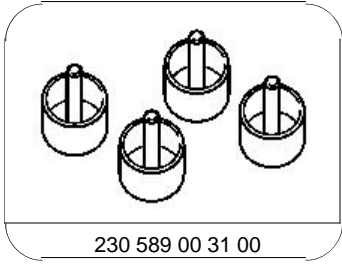

230 589 00 31 00

Adapter kit