


MODEL 230.4 except CODE (P99) "AMG Black Series" special model

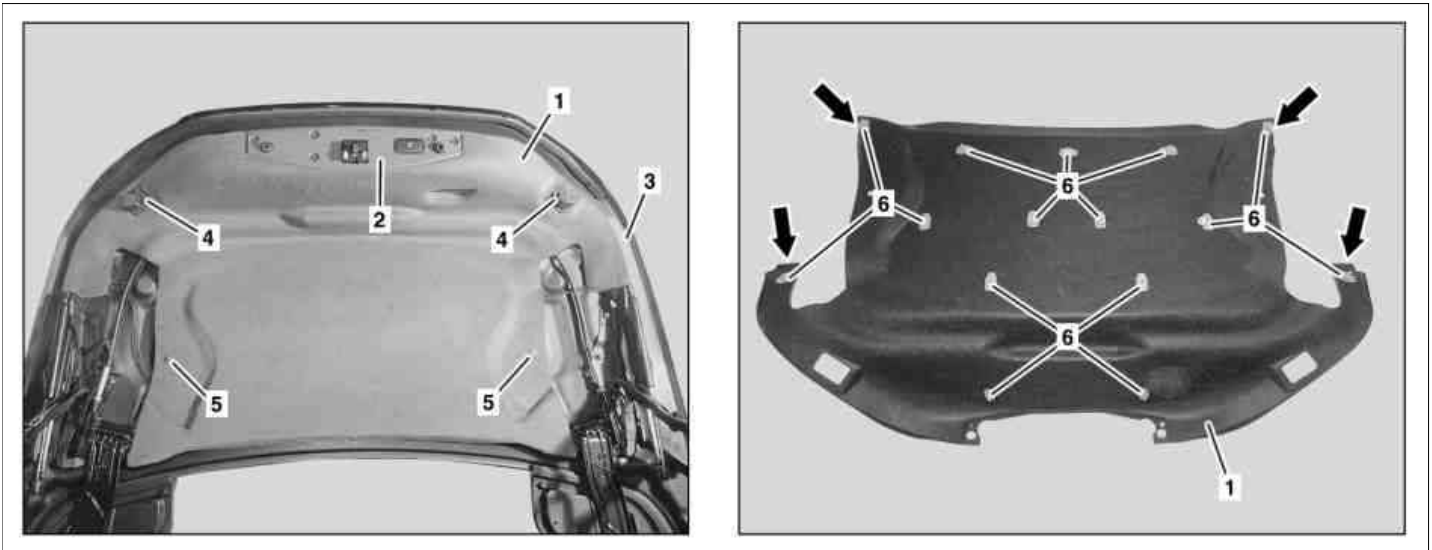

P68.30-3262-08


- 1 Trim
- 2 Cover
- 3 Trunk lid

- 4 Locking wedge
- 5 Expansion clip
- 6 Clip

	<b>Remove/install</b>		
<b>Danger!</b>	<b>Risk of injury</b> caused by moving parts that can <b>pinch, crush</b> or, in extreme cases, even <b>sever</b> extremities	No parts of the body or limbs should be within the operating range of the mechanism when moving components.	AS00.00-Z-0009-01A
1	Completely open Vario roof		
2	Remove cover (2) from trunk lid (3)	<b>Installation:</b> Replace damaged expansion clips.	
3	Remove closing wedges (4) from trunk lid (3)		*BA88.50-P-1015-01A
4	Remove expansion clips (5)	<b>Installation:</b> Replace damaged expansion clips (5).	
5	Unclip paneling (1) from trunk lid (3) starting at outer clips (6) (arrows) and remove.	Position mounting wedge directly to corresponding clip (6) to unclip, to prevent damaging paneling (1). <b>Installation:</b> Replace damaged clips (6). 	*110589035900
6	Install in the reverse order		
7	Check trunk lid adjustment (3), correct if necessary	Vehicles up to end no.. 063909 Vehicles as of end no. 063910	AR88.50-P-5200R AR88.50-P-5200RA

**Trunk lid**

Number	Designation	Model 230
BA88.50-P-1015-01A	Bolt, striker to trunk lid	Nm 8

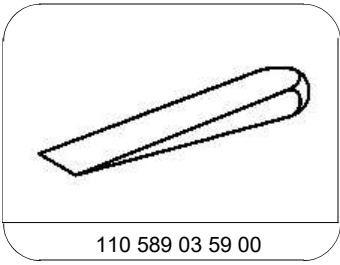

110 589 03 59 00

Mounting wedge