


MODEL 230.4 except CODE (P99) "AMG Black Series" special model

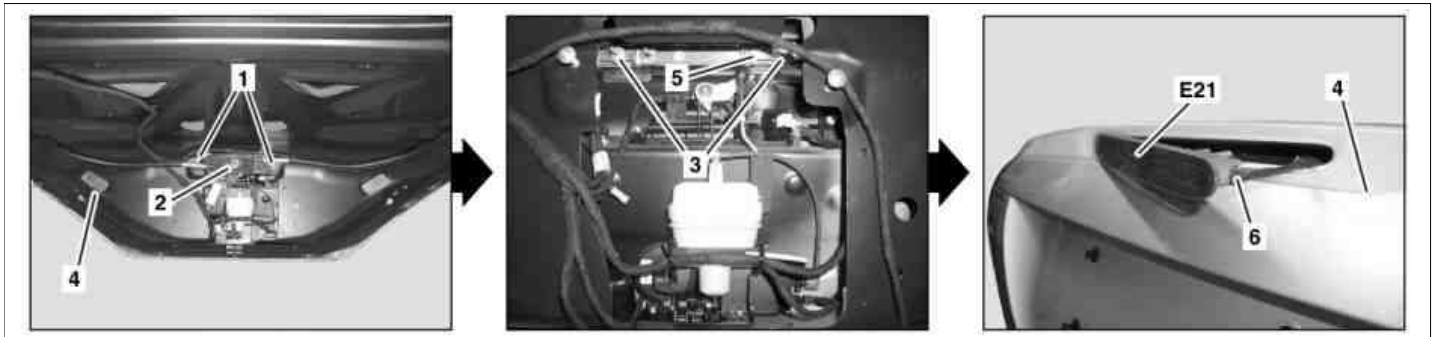

P82.10-2782-07

1 Bolts  
2 Side flaps drive gear  
3 Nuts

4 Trunk lid  
5 Bracket  
6 Electrical connector

E21 Center high-mounted stop lamp

	Remove/install		
1	Remove paneling from trunk lid		AR68.30-P-8150R
2	Remove screws/bolts (1) and remove side flap control drive gear (2) from trunk lid (4)	Do not disconnect electrical connector from side flaps motor. 	*BA77.30-P-1007-01B
3	Undo nuts (3) and remove bracket (5) out of trunk lid (4)		
4	Remove center high-mounted brake lamp (E21) from trunk lid (4)	Until electrical connector (6) is accessible.	
5	Disconnect electrical connector (6) and remove center high-mounted brake lamp (E21)		
6	Install in the reverse order		

## Soft top

Number	Designation	Model 230
BA77.30-P-1007-01B	Bolt, side flaps drive gear to liftgate	Nm 8