


MODEL 230.4

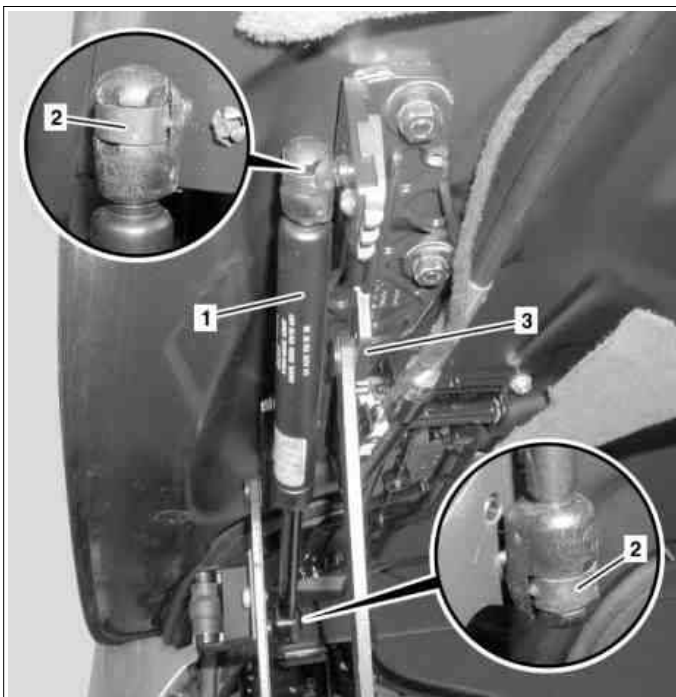

Shown on model 230.4 without code (P99) Special model "AMG Black Series"

- 1 Gas-operated strut
- 2 Fuse
- 3 Hinge bracket








P88.50-2287-12


Shown on model 230.4 without code (P99) Special model "AMG Black Series"

- 4  Support
- 5  Adapter




P88.50-2736-01

	Remove/install		
1	Open trunk lid and secure with support (4) and adapter (5).	 	<a href="#">*170589046300</a> <a href="#">*230589086300</a>
2	<b>Risk of injury</b> caused by body parts being pinched or crushed when working on gas-operated struts under tension Lift top and bottom retainers (2) with suitable screwdriver and remove gas-operated strut (1) from hinge bracket (3)	Only remove and install gas-operated struts when they are not under tension and when the components are properly secured.  Do not remove retainers (2) because otherwise tension on retainers (2) is lost.  <b>Installation:</b> Clip gas-operated strut (1) into hinge bracket (3) with retainers (2) installed.	<a href="#">AS00.00-Z-0012-01A</a>
3	Install in the reverse order		

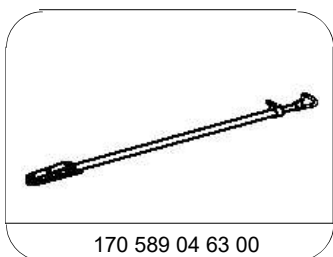

Support

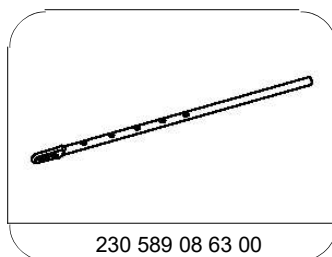

Adapter