


**Preparation**

- 1 Remove Parktronic wiring harness (9).
- 2 Remove impact absorber (10).
- 3 Remove fog lamp (7) and rosette for windshield cleaning system (6).
- 4 Remove internal component (8) and protective strips (2).
- 5 Remove license plate lid (1), grille (3) and tow eye lid (4).


**Assembling**

- 6 Assemble and install bumpers in opposite order.

**i** Use AMG license plate molding.

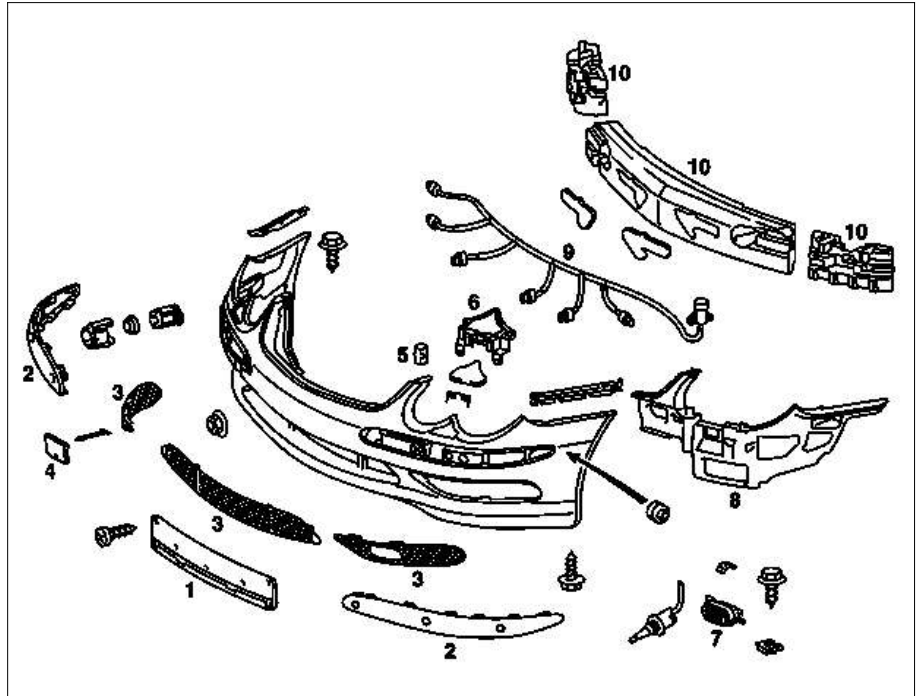




P88.00-2158-06

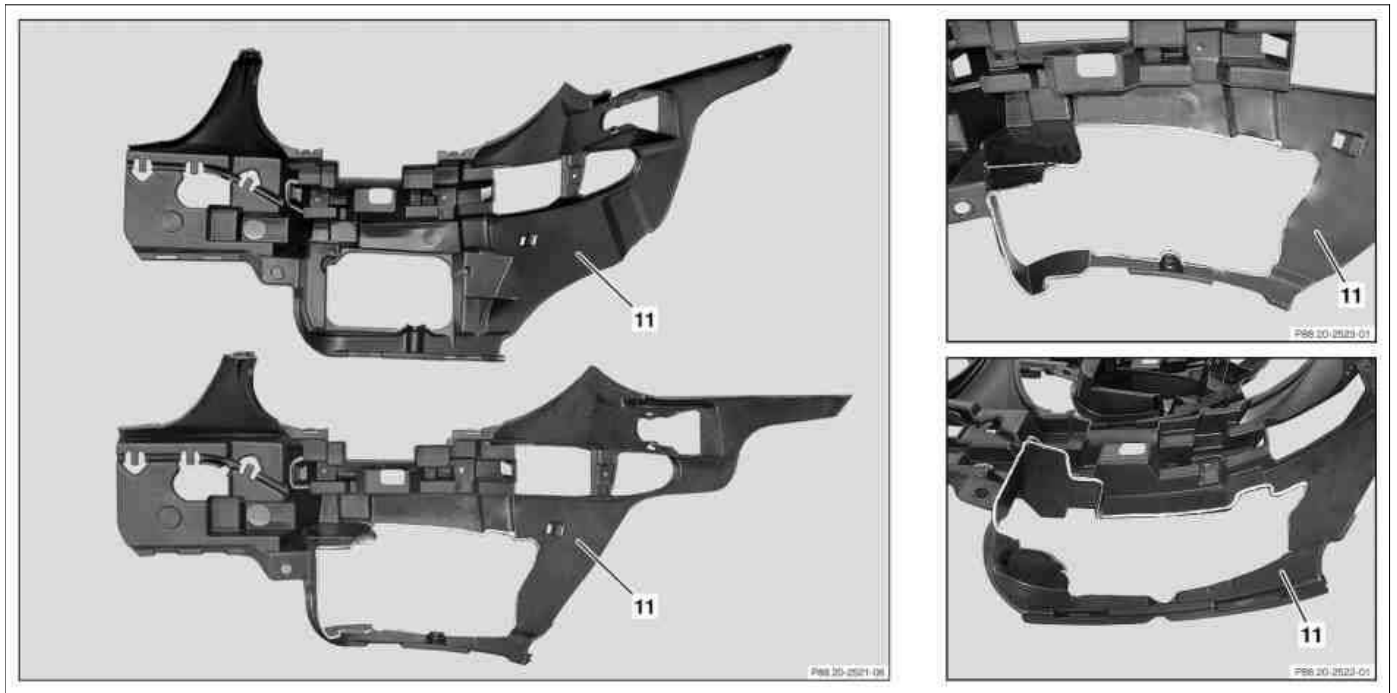

P88.20-2524-09

**7.1 Only with "Safety Car" bumper**

- Install cutout for right front fog lamp in right internal component (11) as shown in picture.

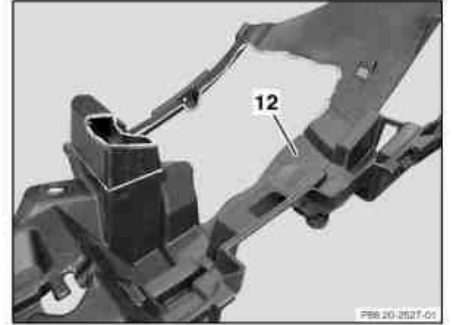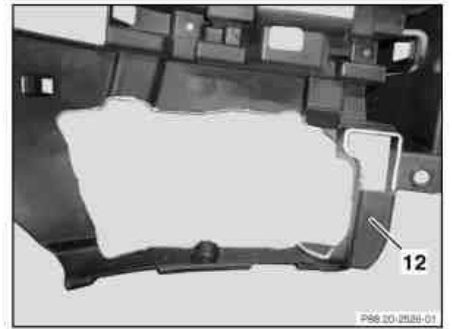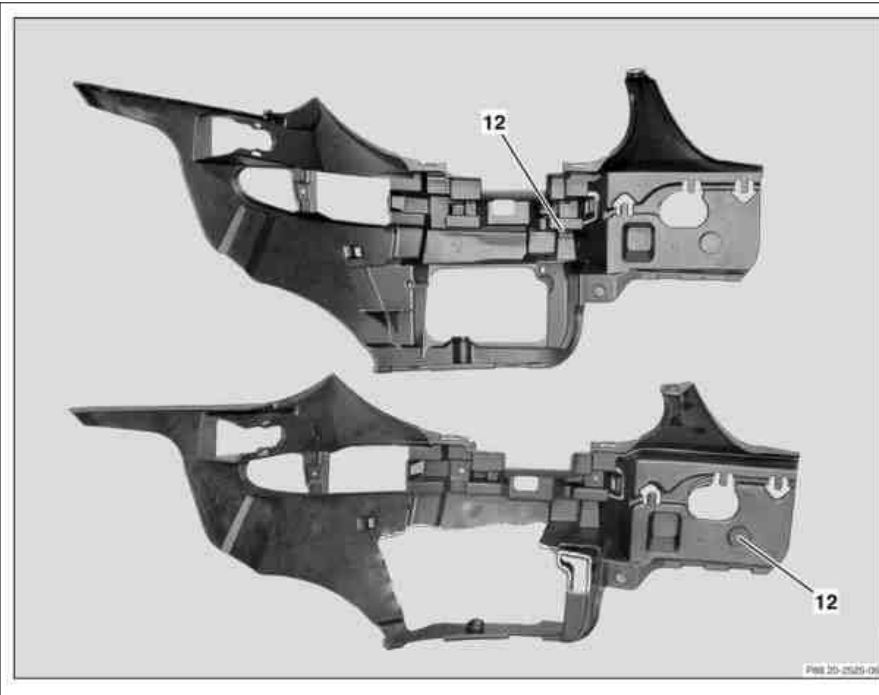


P88.20-2528-09

**8.1 Only with "Safety Car" bumper**

- Install cutout for left front fog lamp in right internal component (12) as shown in picture.

**9.1 Only with "Safety Car" bumper**

- Fasten front fog lamp (7), left and right, in bumper with bolts (13).
- Connect wiring harness (17) to front fog lamp (7), left and right.

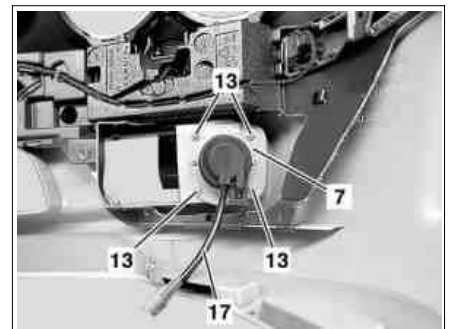

P88.20-2529-01

**10.1 Only with "Safety Car" bumper**

- Install clips (15) in left and right side recess in bumper.
- Clip right outer grille (14) into bumper.

**i** Left outer grille and right outer grille (14) are different.



P88.20-2531-02




P88.20-2530-02

### 11.1 Only with "Safety Car" bumper

- Clip left outer grille (16) into bumper.

**i** A black cover is installed on the inside of the left outer grille (16)

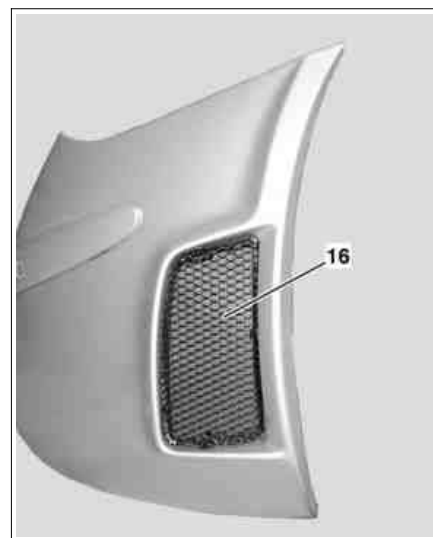

P88.20-2532-02