


Preparation

- 1 Remove bumper
- 2 Remove inner carrier (2) and side mount (1).
- 3 Remove Parktronic wiring harness (3) and antenna (6) as well as moldings (5) and cover (4).

Assembling

- 4 Mask bases analog to series on inner carrier (2).
- 5 Assemble and install bumper on opposite order.

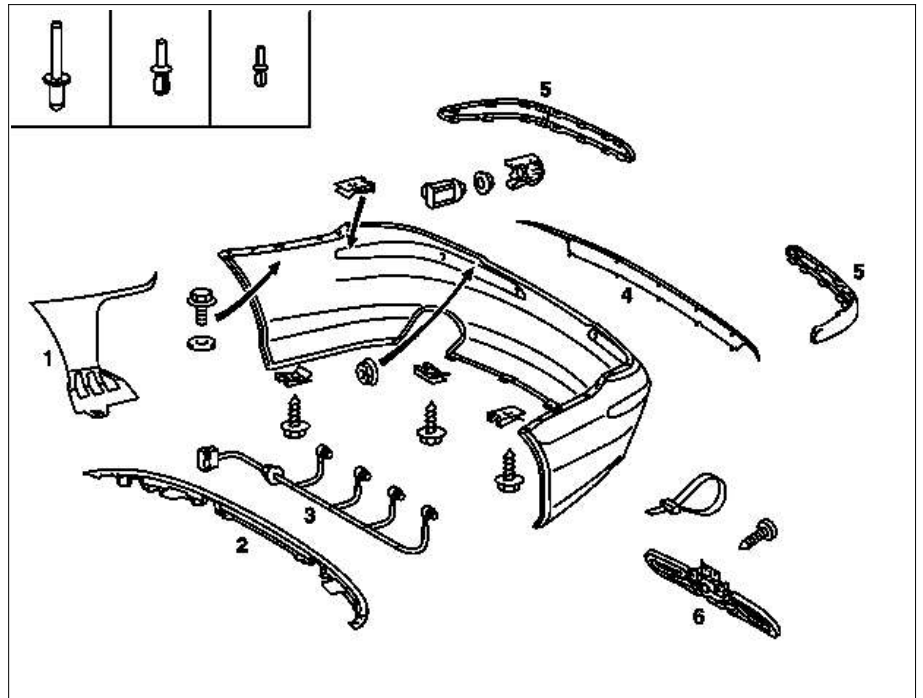

P88.00-2159-06