


**Preparation**

- 1 Remove side paneling.

**Assembling**

- 2 Reinstall AMG side paneling in opposite order.

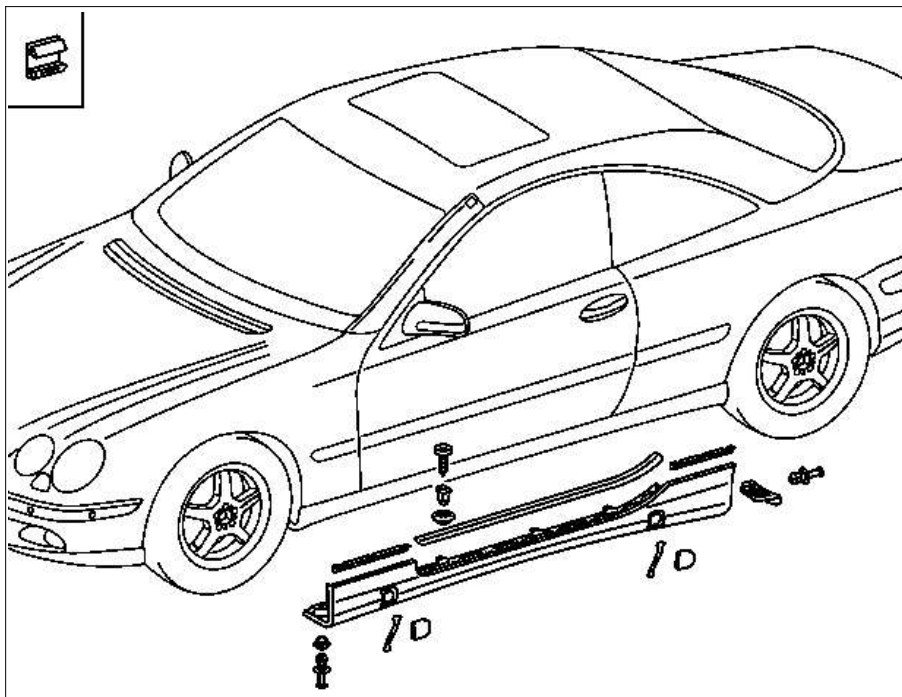

P88.00-2160-06