


P88.10-2136-09

Shown on vehicle up to 28.2.06, left fender liner

- |   |                             |   |                                  |    |                |
|---|-----------------------------|---|----------------------------------|----|----------------|
| 1 | Front section, inner fender | 5 | Nuts                             | 9  | Nuts           |
| 2 | Rear section, inner fender  | 6 | Bolts                            | 10 | Bolts          |
| 3 | Bolts                       | 7 | Rear engine compartment paneling | 11 | Expansion clip |
| 4 | Screw                       | 8 | Nuts                             |    |                |

Remove/install		
1	<p><b>Risk of death</b> caused by vehicle slipping or toppling off of the lifting platform.</p> <p>Raise vehicle with vehicle lift</p>	<p>Align vehicle between columns of vehicle lift and position four support plates at vehicle lift support points specified by vehicle manufacturer.</p> <p></p>
	<b>Remove fender liner front section (1)</b>	<b>AS00.00-Z-0010-01A</b>
2	Unscrew bolts (3) and bolt (4)	
3	Unscrew nuts (5).	
4	Remove fender liner front section (1)	<b>i Installation:</b> Ensure that front section of fender liner (1), and rubber seal are seated properly.
	<b>Fender liner rear section (2)</b>	
5	Remove front wheel	<b>AP40.10-P-4050Z</b>
6	Unscrew bolts (6) from rear engine compartment paneling (7)	
7	Pull down rear engine compartment paneling (7) until nuts (8) are accessible and unscrew nuts (8)	
8	Unscrew nuts (9)	
9	Unscrew bolts (10) and bolt (4)	
10	Remove expansion clips (11) from longitudinal member paneling	
11	Remove fender liner rear section (2)	<b>i Installation:</b> Ensure that fender liner rear section (2) and rubber seal are seated properly.
12	Install in the reverse order	

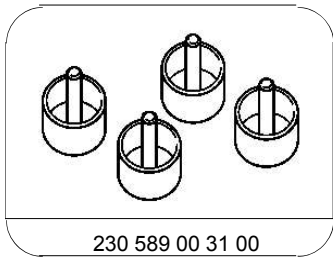

230 589 00 31 00

Adapter kit