


P88.20-3157-09

Side bumper mount shown on left side of vehicle as example

- | | | | |
|---|--------------|----|-------|
| 1 | Rear bumper | 5 | Bolts |
| 2 | Fender liner | 13 | Screw |
| 3 | Screw | 14 | Nut |
| 4 | Screw | | |

Shown on vehicles up to 28.2.06 with code (404) Left multicontour seat

- | | |
|---|---|
| 6 | Overpressure reservoir (up to 28.6.06 with code (404) Left multicontour seat or code (405) Right multicontour seat) |
| 7 | Padding (up to 28.6.06 with code (404) Left multicontour seat or code (405) Right multicontour seat) |
| 8 | Insulation mat |
| 9 | Bolts |

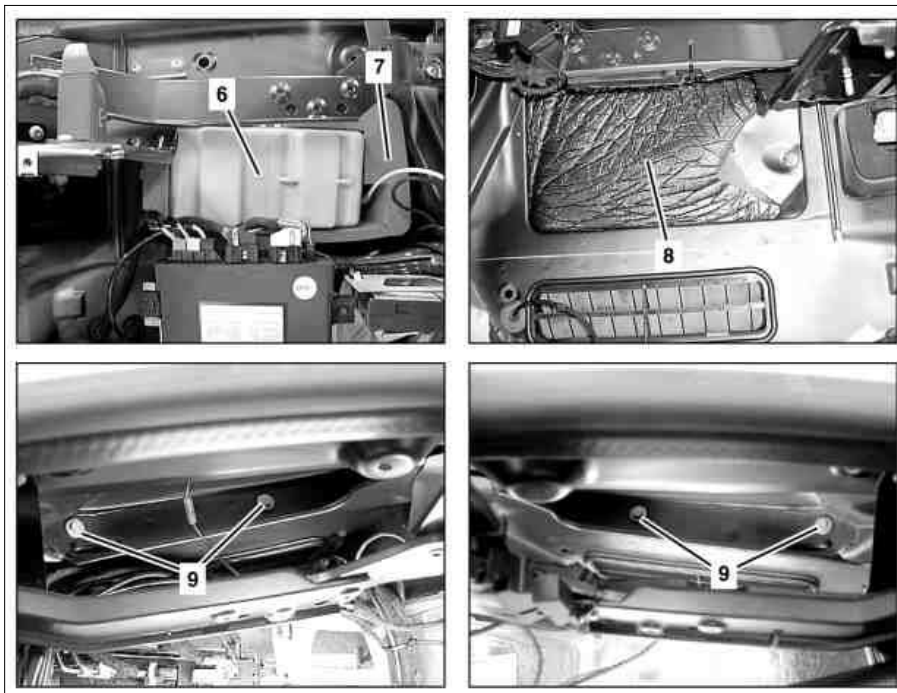


P88.20-2219-06

Shown with code (220) Parktronic system (PTS)

- 2 Fender liner
- 11 Nut
- 12 Bracket

X35/28 PTS, rear bumper connector (with code (220) Parktronic system (PTS))

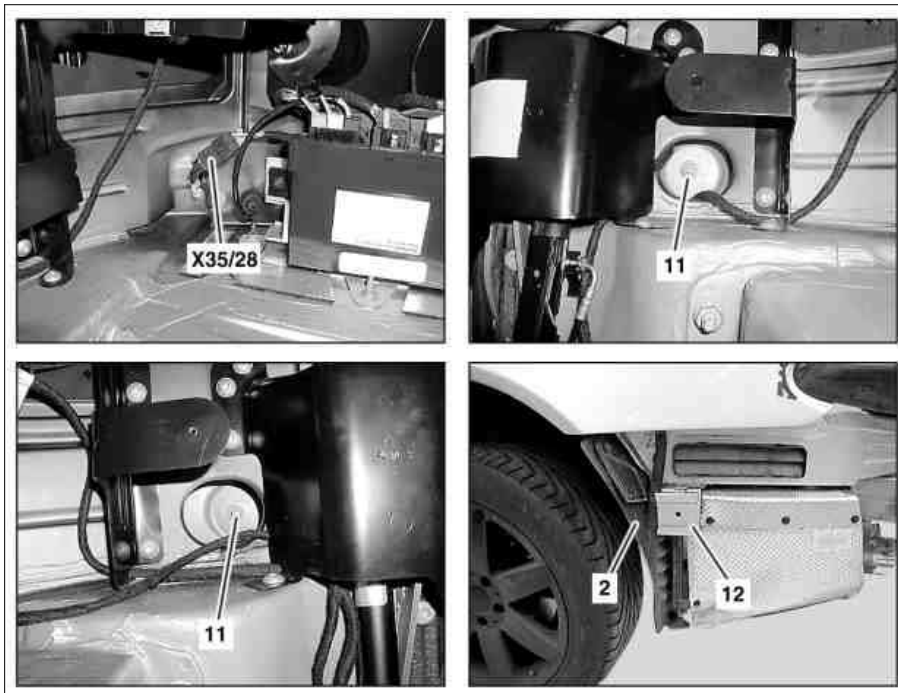

P88.20-2474-06

☒ ☒	Remove/install		
1	<p>Risk of death caused by vehicle slipping or toppling off of the lifting platform.</p> <p>Raise vehicle with vehicle lift</p>	Align vehicle between columns of vehicle lift and position four support plates at vehicle lift support points specified by vehicle manufacturer.	AS00.00-Z-0010-01A
2	Press fender liner (2) to side and unscrew bolt (3)	i Left and right sides of the vehicle.	
3	Unscrew bolt (4) at bottom of rear fender (1)	i Left and right sides of the vehicle.	
4	Unscrew bolts (5) at bottom of rear bumper (1)		
5	Remove left and right side luggage compartment lining		AR68.30-P-4800R
6	Remove overpressure reservoir (6), lay down to side with pneumatic line connected and remove padding (7)	On vehicles up to 28.2.06 with code (404) Left multicontour sea or code (405) Right multicontour seat	
7	Remove left and right damping mat (8)		
8	Unscrew bolts (9) in left and right fender at side		
9	Disconnect PTS connector for rear bumper (X35/28) and press rubber grommet on electrical line out of body	On vehicles with code (220) Parktronic system (PTS)	
10	Unscrew nuts (11) from rear center section		
11	Remove rear bumper (1) with aid of helper	<p>i On vehicles with code (220) remove parktronic system (PTS) on electric wiring harness out of body.</p> <p>i Installation: Ensure that rear bumper (1) is seated correctly in left and right bracket (12).</p>	
12	Install in the reverse order		