


MODEL 230.4 up to 28.2.06





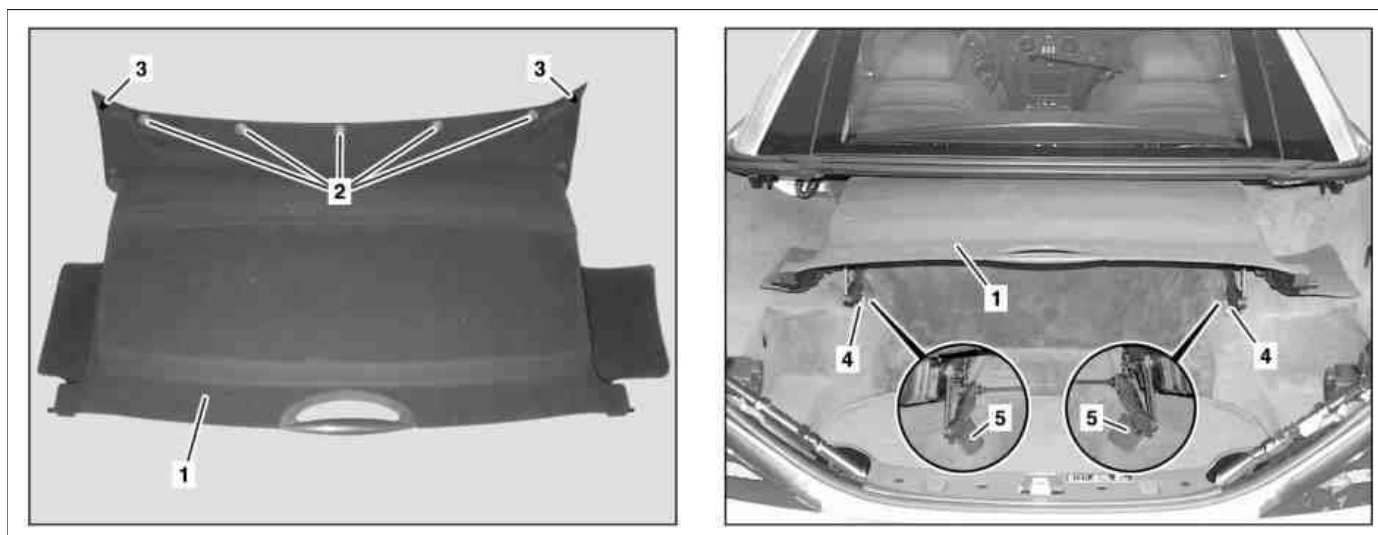

P68.50-2367-08

1 Trunk partition  
2 Pushbuttons

3 Expansion clip  
4 Bolt

5 Cover

 	Remove/install		
1	Completely close Vario roof.		
2	Open trunk lid		
3	Remove trunk partition (1) from pushbuttons (2)		
4	Remove expansion clips (3)	 <b>Installation:</b> Replace damaged expansion clips (3).	
5	Remove left and right cover (5).	 Carefully pull out covers (5) toward rear to prevent damage.	
6	Unscrew bolts (4) and remove trunk partition (1)		
7	Install in the reverse order		